

MODEL	'X' CASE WIDTH	CASE DEPTH	CASE HEIGHT	'A' MINIMUM ALCOVE DEPTH	'B' MINIMUM ALCOVE WIDTH	'C' MINIMUM ALCOVE HEIGHT
BN37R	35-5/8"	26-1/4"	82-1/4"	26-1/2"	36-1/8"	82-1/2"
BN47R	47-5/8"	26-1/4"	82-1/4"	26-1/2"	48-1/8"	82-1/2"
BN57R	59-5/8"	26-1/4"	82-1/4"	26-1/2"	60-1/8"	82-1/2"
B35R	35-5/8"	34-1/4"	61-3/4"	34-1/2"	36-1/8"	62"
B45R	47-5/8"	34-1/4"	61-3/4"	34-1/2"	48-1/8"	62"
B55R	59-5/8"	34-1/4"	61-3/4"	34-1/2"	60-1/8"	62"
B65R	71-5/8"	34-1/4"	61-3/4"	34-1/2"	72-1/8"	62"
B37R	35-5/8"	34-1/4"	82-1/4"	34-1/2"	36-1/8"	82-1/2"
B47R	47-5/8"	34-1/4"	82-1/4"	34-1/2"	48-1/8"	82-1/2"
B57R	59-5/8"	34-1/4"	82-1/4"	34-1/2"	60-1/8"	82-1/2"
B67R	71-5/8"	34-1/4"	82-1/4"	34-1/2"	72-1/8"	82-1/2"
BD3632	36-1/4"	32-1/2"	82-5/8"	32-1/2"	36-3/4"	82-7/8"
BD4732	47-1/4"	32-1/2"	82-5/8"	32-1/2"	47-3/4"	82-7/8"
MD485R	50-1/4"	37-1/8"	85-1/2"	39-1/8"	50-3/4"	87-1/2"
MD685R	74-1/4"	37-1/8"	85-1/2"	39-1/8"	74-3/4"	87-1/2"

Please Note

Minimum alcove dimensions to be free of any obstructions

Power cord is in the rear of the case.

If adding front panel, lower front panels, and upper front panel, they must not be attached to the case and easily removable for service.

Do not block intake or discharge air.

All dimensions include wall spacers.

