



Coupe Plate  
**6940E630** D 12"  
**6940E6033** D 11"  
 (Plate Cover 5379S792,  
 5379S804)  
**6940E654** D 10 5/8"  
 (Plate Cover 5379S802)  
**6940E631** D 8 1/4"  
**6940E632** D 6 1/2"  
**6940E633** D 5 1/2"



Oval Plate  
**6940E6072** L 11" W 10"  
**6940E6060** L 8 7/8" W 7 7/8"  
**6940E6059** L 6 3/4" W 5 7/8"



Oval Coupe Tray  
**6940E649** L 14" W 6"  
**6940E648** L 12" W 4 1/2"



Oval Coupe Platter  
**6940E641** L 13 1/2" W 8 1/2"  
**6940E640** L 12" W 7 3/4"  
 Oval Coupe Plate  
**6940E653** L 9" W 6 3/8"  
**6940E652** L 8" W 5 1/2"



Oval Platter  
**6940E6094** L 13 3/8" W 9 1/4"  
**6940E6095** L 11" W 8 1/4"



Round Coupe Bowl  
**6940E671** D 11" H 2 1/2" (64 1/4 oz)  
 (Plate Cover 5379S804)  
 Round Coupe Dish  
**6940E605** D 9 1/2" H 2" (38 3/4 oz)  
**6940E634** D 8" H 1 7/8" (24 1/2 oz)  
**6940E650** D 6 3/8" H 1 3/8" (10 oz)



Flared Serving Bowl  
**6940E639**  
 D 11" H 2 7/16" (53 oz)  
**6940E670**  
 D 9 1/2" H 2 1/2" (39 oz)



Flared Bowl  
**6940E651**  
 D 7 5/8" H 2 5/8" (33 oz)  
**6940E636**  
 D 6" H 2 1/4" (16 oz)  
**6940E637**  
 D 4 1/2" H 1 5/8" (6 1/2 oz)  
**6940E638**  
 D 3" H 1 1/8" (2 1/2 oz)



Oval Bowl  
**6940E685**  
 L 10" W 6 1/4" H 2 3/4" (30 oz)  
**6940E684**  
 L 8" W 5" H 2 1/4" (15 1/2 oz)  
**6940E6023**  
 L 6" W 3 3/4" H 1 3/4" (7 oz)  
**6940E6022**  
 L 4" W 2 1/2" H 1 1/8" (1 3/4 oz)



Bowl  
**6940E6097**  
 D 9 1/8" H 2 1/2"  
 (45 oz)



Deep Bowl  
**6940E612**  
 D 8 1/4" H 2 3/8" (37 oz)  
 Cereal Bowl  
**6940E6024**  
 D 7" H 2" (16 oz)



Rice Bowl  
**6940E694** D 7 3/4" H 3 3/4" (48 oz)  
**6940E693** D 6 1/4" H 3" (28 oz)  
**6940E692** D 4 1/2" H 2 1/4" (9 oz)  
 Lid w/Slot  
**6940E695** D 8" (Fits E694)  
**6940E698** D 6 5/8" (Fits E693)  
**6940E697** D 4 5/8" (Fits E692)  
 Saucer Double Well  
**6940E6016** D 6 1/2" (Fits E692)



Curved Bowl  
**6940E6091**  
 D 7" H 2 1/4"  
 (33 oz)  
**6940E6090**  
 D 5 1/4" H 2 1/4"  
 (20 oz)



Bowl  
**6940E6025**  
 D 5 1/2" H 2 1/8"  
 (12 oz)  
**6940E6044**  
 D 4 3/4" H 2 3/8"  
 (10 1/2 oz)



Bouillon Cup  
**6940E6093**  
 D 4" H 2 1/4" (8 oz)  
 Saucer Double Well  
**6940E6016** D 6 1/2"



Can Cup  
**6940E642** L 4 3/4" H 2 1/2" (9 1/2 oz)  
**6940E643** L 3 1/2" H 2" (4 1/2 oz)  
 Saucer  
**6940E644** D 6 3/8" (Fits E642)  
**6940E645** D 5" (Fits E643)



Low Cup  
**6940E614** L 5 1/4" H 2 3/4" (12 oz)  
**6940E615** L 4 3/4" H 2 3/8" (8 oz)  
**6940E688** L 3 3/8" H 1 5/8" (3 oz)  
 Saucer Double Well  
**6940E6016** D 6 1/2" (Fits E615, E614)  
**6940E687** D 4 5/8" (Fits E688)



Coupe Mug  
**6940E6056**  
 L 5 1/4" H 4 1/8"  
 (15 1/2 oz)



Unhandled Cup  
**6940E691**  
 L 2 1/2" H 2"  
 (3 oz)



Unhandled  
 Can Creamer  
**6940E6045**  
 L 2 1/4" H 2 5/8"  
 (3 1/2 oz)



Sauce Dish  
**6940E618**  
 D 4" H 1 1/4"  
 (4 1/4 oz)



Sauce Dish  
**6940E617**  
 D 3 1/2" H 1"  
 (1 oz)



Curved Chinese Spoon  
**6940E6011** L 6 3/4"  
 Spoon Rest  
**6940E6013** L 4" H 2"



Chinese Spoon  
**6940E621** L 5" H 1 3/4"  
 Chinese Spoon Rest  
**6940E620** L 3 1/2" H 2 1/8"