


**BEVERAGE-AIR CORPORATION**

3779 Champion Blvd.,  
Winston-Salem, NC 27105  
USA  
Tel. 001 336 245 6400  
sales@bevair.com

**FREEZER CUPS  
MODEL RC500**

DESCRIPTION OF THE PARTS

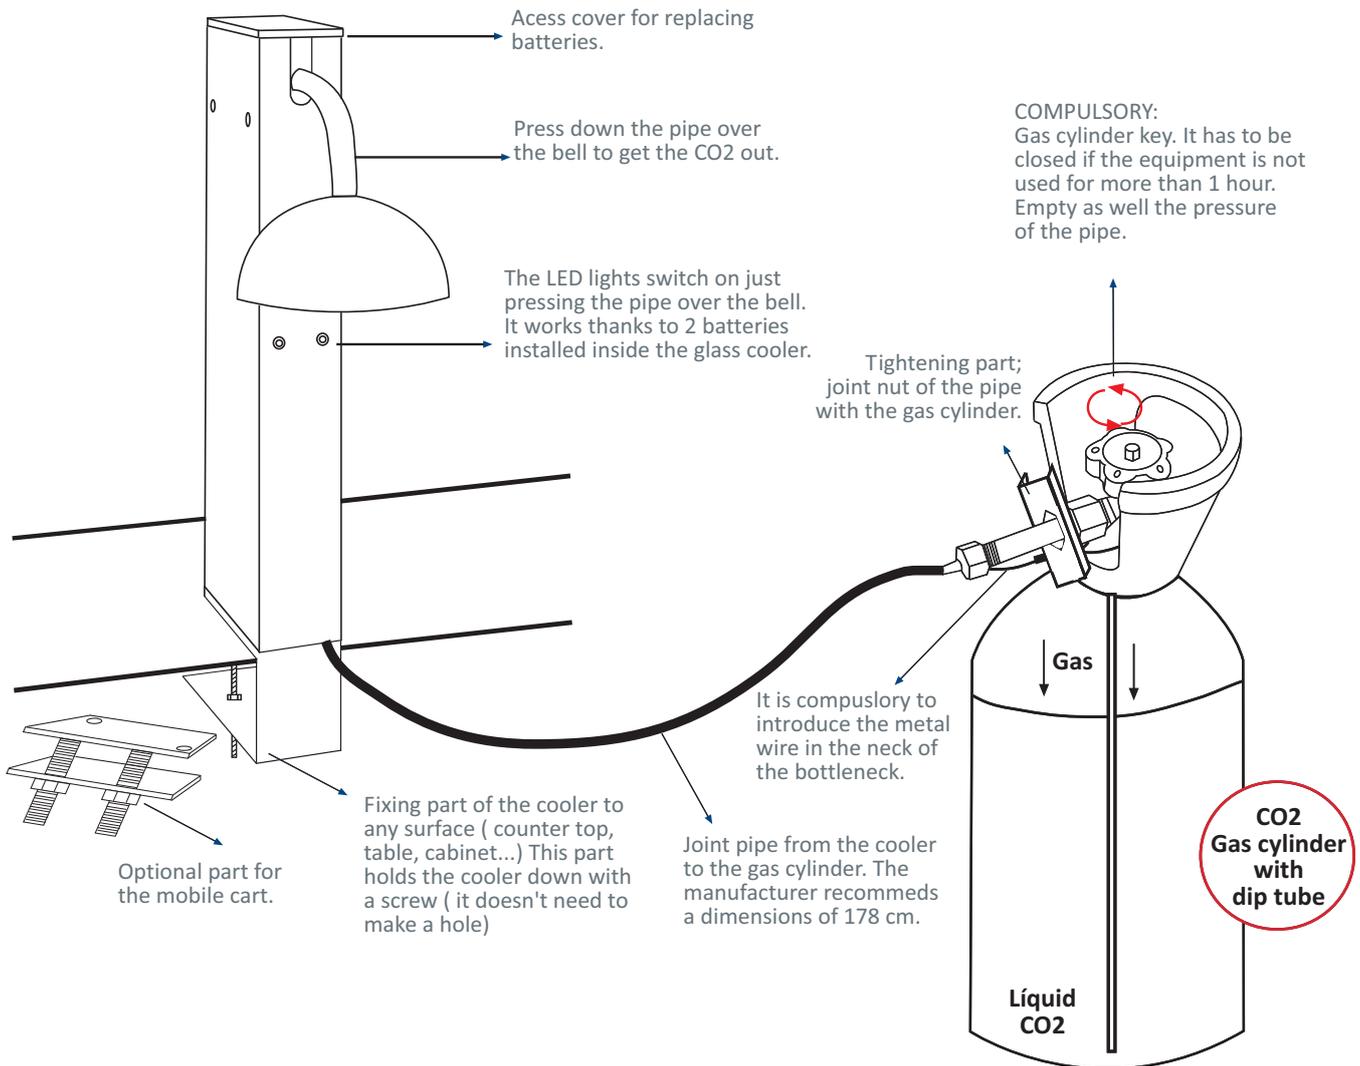

**COMPULSORY**

- You must never release the nut gas pipe without having closed first the entry of gas of the bottle and release the pressure from the pipe.
- It is compulsory to install the bottle and equipment in a fresh place, and with a temperature lower than 30°C.
- The gas cylinder or bottle must be far away from any heat supply. The gas won't cool anything with temperatures higher than 25°C
- Put the metal wire in the bottleneck.
- It is essential to fulfill these advices to get a good working of the machine and for warranty reasons.