
Induction Range User's Manual

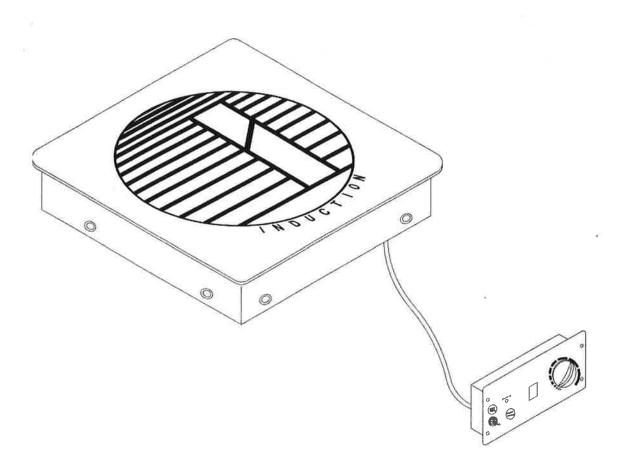

M	od	el	N	٥.
---	----	----	---	----

DI-1800 120V, 60Hz, 1,800Watt

SERIAL NO.:C0903090040

USE AND CARE INSTRUCTIONS - IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE OPERATION

- 1. USE AN INDIVIDUAL 120VOLT, 15AMP ELECTRICAL SOCKET.
- 2. DO NOT BLOCK THE AIR-OUTLET LOCATED AT THE BACK OF THE INDUCTION RANGE. BLOCKING MAY OVERHEAT THE UNIT.
- 3. FOLLOWING INSTRUCTION ON VENTILATION, TO PROVIDE ENOUGH OPENING FOR AIR-INTAKE & AIR-EXIT.
- 4. USE PANS 5 INCHES OR LARGER IN DIAMETER. WE RECOMMEND PANS BE LESS THAN 10 1/2 INCHES IN DIAMETER. PLEASE REFER TO THE NEXT PAGE FOR A LIST OF SUITABLE AND UNSUITABLE PANS.
- 5. DO NOT TOUCH THE HOT SURFACE OF THE VITRO-CERAMIC GLASS PLATE. NOTE: THE INDUCTION RANGE ITSELF DOES NOT PRODUCE ANY HEAT DURING COOKING. HOWEVER, THE HEAT FROM THE PAN WILL LEAVE THE SURFACE OF THE VITRO-CERAMIC GLASS PLATE HOT!
- DO NOT COOK EMPTY POTS OR PANS. HEATING AN EMPTY PAN WILL
 AUTOMATICALLY ACTIVATE THE OVERHEATING PROTECTION DEVICE AND THE UNIT
 WILL SHUT OFF.
- 7. PLACE THE INDUCTION RANGE ON A HORIZONTAL SURFACE AND AT LEAST 4 INCHES AWAY FROM THE WALL AND OTHER OBJECTS FOR PROPER VENTILATION.
- 8. DO NOT PLACE ANY OBJECTS OR TOOLS IN THE AIR-INTAKE (ON THE BOTTOM) OR AIR-OUTLET (ON THE BACK). DOING SO MAY CAUSE ELECTRICAL SHOCK.
- 9. TO PROTECT AGAINST ELECTRICAL SHOCK, DO NOT IMMERSE THE UNIT, THE CORD, OR THE PLUG IN OR NEAR WATER OR OTHER LIQUIDS.
- 10. CLOSE SUPERVISION IS NECESSARY WHEN THE INDUCTION RANGE IS USED BY OR NEAR CHILDREN.
- 11. DO NOT OPERATE THE INDUCTION RANGE IF IT HAS BEEN DAMAGED IN ANY MANNER OR IF THE UNIT MALFUNCTIONS. RETURN THIS UNIT TO THE NEAREST AUTHORIZED SERVICE FACILITY FOR EXAMINATION OR REPAIR.
- 12. THE USE OF ANY ACCESSORIES NOT RECOMMEND BY THE MANUFACTURER MAY CAUSE INJURIES.
- 13. KEEP THE POWER CORD AWAY FROM HEAT.
- 14. DO NOT PLACE THE INDUCTION RANGE IN, ON, OR NEAR OPEN FLAMES, ELECTRIC BURNERS, HEATED OVENS OR OTHER HIGH TEMPERATURE SURROUNDINGS.
- 15. DO NOT HEAT ANY SEALED CANS ON THE INDUCTION RANGE. A HEATED CAN MAY EXPLODE.
- DO NOT MOVE THE INDUCTION RANGE WHILE COOKING OR WHEN THE PAN IS HOT.
- 17. AFTER THE INDUCTION RANGE HAS COOLED DOWN, UNPLUG THE CORD AND CLEAN AS FOLLOWS,
 - VITRO-CERAMIC GLASS: WIPE WITH DAMP CLOTH OR USE A MILD, NON-ABRASIVE CLEANING SOLUTION.
 - BODY: WIPE THE CONTROL PANEL WITH SOFT CLOTH OR USE A MILD CLEANER.
- 18. DO NOT USE INDUCTION RANGE FOR OTHER THAN INTENDED USE.
- 19. UNPLUG WHEN NOT IN USE.
- 20. WHEN STORING, DO NOT PLACE ANY OBJECTS ON TOP OF THE INDUCTION RANGE.

SAVE THIS INSTRUCTION !!!

SUITABLE AND UNSUITABLE POTS AND PANS

SUITABLE POTS

- 1. IRON
- 2. CAST IRON
- 3. STAINLESS STEEL
- 4. ENAMEL WARE

i	`			•
Stainless Steel	Iron Pan (Iron	Enamel Pan	Stainless Steel	Iron pan
Pan	Griddle)		kettle	
-				
Stainless steel fry				
pan				

ALL POTS AND PANS MUST HAVE A MAGNETIC BOTTOM.

ALL POTS AND PANS MUST HAVE A FLAT BOTTOM.


ALL POTS AND PANS SHOULD HAVE A DIAMETER BETWEEN 5 AND 10 1/2 INCHES.

UNSUITABLE POTS


- 1. POT WITH DIAMETER BELOW 2 INCHES.
- 2. STAINLESS STEEL PANS WITH ALUMINUM BOTTOM
- 3. POTTERY
- 4. GLASS PANS
- 5. ALUMINUM PANS
- 6. BRONZE PANS
- 7. COPPER POTS
- 8. PAN WITH FEET

		*		
Ceramic Pan	Aluminum Pan	Bottom not flat	Dia smaller than 12 cm (4 IN.)	Pan with legs

FEATURES

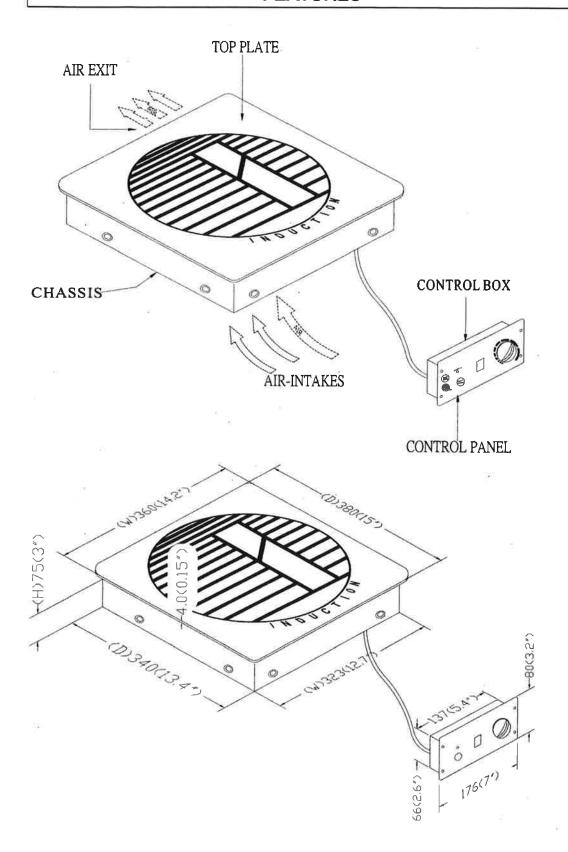


Installation

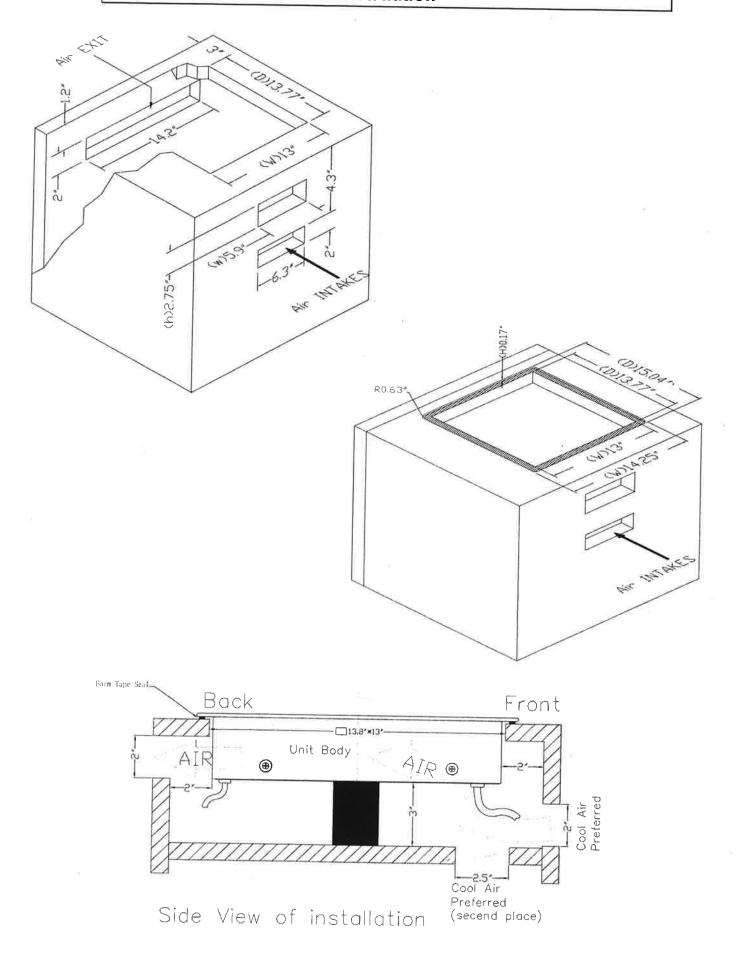


CONTROL PANEL

MODEL NO. DI-1800

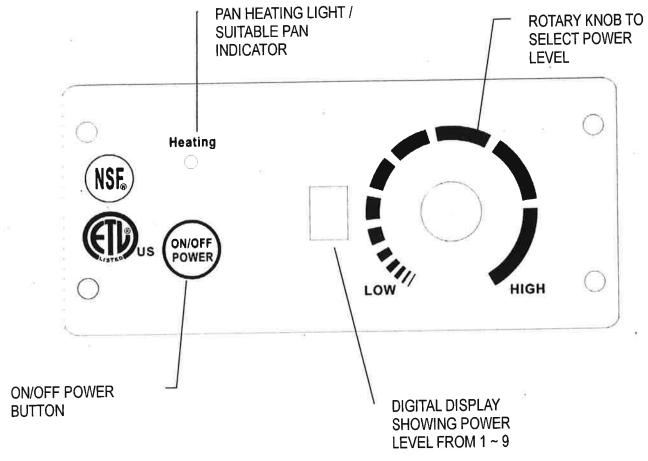

MODELNO. DI-1500

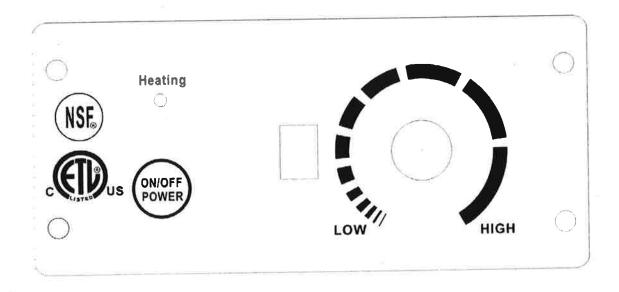

CONTROL KEYS DESCRIPTION

POWER

PRESS THE 'ON/OFF' BUTTON TO TURN THE UNIT ON. PRESS THE 'ON/OFF' BUTTON AGAIN TO TURN THE UNIT OFF.

HEAT FUNCTION

ROTATE KNOB TO SELECT POWER LEVEL
ROTATE CLOCKWISELY: TO INCREASE POWER LEVEL
ROTATE ANTI-CLOCKWISELY: TO DECREASE POWER LEVEL

SAFETY DEVICE

OVERTIME DETECTOR

IF THE PAN IS LEFT ON THE INDUCTION RANGE FOR MORE THAN 2 HOURS, IF THE USER DOES NOT OPERATE ANY FUNCTIONS FOR MORE THAN 2 HOURS, THE RANGE WILL AUTOMATICALLY SHUT OFF.

AUTOMATIC SAFETY SHUT-OFF

IF THE INDUCTION RANGE IS LEFT FOR MORE THAN 60 SECONDS WITHOUT A PAN OR WITH AN INCOMPATIBLE PAN, THE UNIT WILL AUTOMATICALLY SHUT OFF.

MATERIAL COMPATIBILITY DETECTOR.

IF THE PAN'S MATERIAL OR IT'S DIMENSIONS ARE NOT SUITABLE FOR THIS INDUCTION RANGE, THE PAN INDICATOR WILL NOT LIGHT.

SMALL OBJECT DETECTOR

THE INDUCTION RANGE WILL NOT RECOGNIZE ANY OBJECTS OR UTENSILS SMALLER THAN 2 INCHES IN DIAMETER. FOR BEST RESULST, USE PANS THAN ARE BETWEEN 5 AND 10 INCHES IN DIAMETER.

OVERHEATING PROTECTION DEVICE

IF THE PAN'S TEMPERATURE BECOMES TOO HIGH, THERE WILL BE A SHORT WARNING SOUND. YOU MUST EITHER LOWER THE TEMPERATURE OR SELECT A LOWER HOLDING TEMPERATURE WITHIN 60 SECONDS. IF THE TEMPERATURE REMAINS TOO HIGH, THE UNIT WILL SHUT OFF AUTOMATICALLY.

It's recommended that user's of pace makers do not operate this equipment. Or, during operation of the cooking, remain at least 2 feet from the cooker.

SPECIFICATION

MODEL NO.	DI-1800	DI-1500		
VOLTAGE	120V / 60Hz			
VITRO-CERAMIC GLASS	APPROX. 14.17 INCHES X 15 INCHES			
ELECTRICAL POWER CONSUMPTION	MAX. 1,800W	MAX. 1,440W		
ELECTRICAL POWER RANGE	APPROX. 300W-1800W	APPROX. 300W-1440W		
	ETLus approval for	ETLc approval for		
	Commercial Cooking	Commercial Cooking		
APPROVALS	appliances	Appliances		
	FCC part 18	FCC part 18		
	NSF	NSF		
	◆ Over Time Protector			
	◆ Automatic Safety Shut-Off			
SAFETY DEVICE	◆ Material Compatibility Detector			
	◆ Small Object Detector			
	◆ Overheating Protection Device			
DIMENSION	(W) 36cm x (D) 38cm x (H) 80cm			
DIMENSION	(14.17 in. x 15 in. x 3.14 in.)			
WEIGHT		Kgs.		
	14.3 Lbs.			

FEDERAL COMMUNICATION (FCC) STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 18 of the FCC rules. These limits are designed to provide reasonable protection against radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning:

Use only shielded cables to connect I/O devices to this equipment.

You aer cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate this equipment.

This device complies with Part 18 FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received including interference that may cause undesired operation.