



THE TIME & TEMPERATURE COMPANY®

Model: TM30


Direct Entry 2-Alarm Timer

Counts 10 hours by minutes & seconds

Features

- Counts up & down
- Big digit
- Direct entry
- Loud and long alarm
- Audio/vibrate alarm
- Stop and restart
- Last count recall
- Counts up after zero
- Brushed stainless steel finish
- ABS plastic
- Sliding mode switch
- 4-way mounting:
pocket clip/magnet/stand/loop
- Battery and instructions included

Note: Remove sticker from display before use.

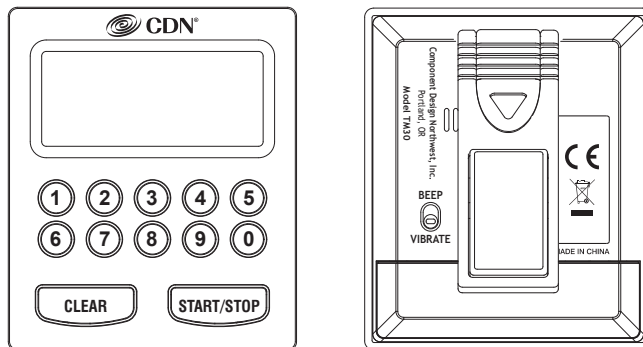

Note: In the following instructions, names of the control buttons are shown in CAPS. Function information that appears on the display is shown in **BOLD CAPS**.

Battery Installation

Replace battery when LCD becomes dim or alarm level declines.

1. Remove battery door in back by sliding in direction of arrow.
2. Install 1.5V AAA battery observing polarity shown in compartment.
3. The display will show all segments and a “beep” will sound.
4. Replace battery door.

Operating Instructions

A. Set Alarm

1. Slide switch on the back to BEEP or VIBRATE to select alarm mode.

B. Count Down

1. Enter the time to be counted on the 1 – 0 keypad. For example, to count 3 minutes exactly, enter 3 0 0 for three minutes, zero seconds. To count 9 hours, 45 minutes and 30 seconds, enter 9 4 5 3 0.
2. Press START/STOP to start the count down. Press START/STOP button to interrupt the count. Press START/STOP button again to resume the count.
3. To clear the count before reaching zero, stop the count by pressing START/STOP. Then press the CLEAR button.

Note: The count must first be stopped to prevent accidental clearing of the display.

4. On reaching zero the alarm will sound for one minute, the display will flash and will start to count up to indicate the overtime since reaching zero. The maximum overtime is 10 hours.
5. Press START/STOP to stop the alarm and the count up. The last count is recalled.
6. Press CLEAR to reset to **0:00⁰⁰**.

C. Count Up

1. When the timer is stopped, press CLEAR to reset to **0:00⁰⁰**.
2. Press START/STOP to begin the count up to a maximum of 10 hours.
3. Press START/STOP to interrupt the count. Press START/STOP again to resume the count.
4. To clear the display, press START/STOP to stop the count. Then, press CLEAR to reset the display to **0:00⁰⁰**.

Care of Your Product

- Avoid exposing your timer to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agent.
- Wipe clean with a damp cloth.

CE Note: This device could be sensitive to electrostatic discharge. If electrostatic discharge or malfunctioning occurs, please re-install the battery to reset this unit.

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



5-Year Limited Warranty: Any instrument that proves to be defective in material or workmanship within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947. This warranty does not cover damage in shipment or failure caused by tampering, obvious carelessness or abuse.



Component Design Northwest, Inc.
PO Box 10947
Portland, OR 97296-0947
Tel 800 338-5594
Fax 800 879-2364
info@cdn-timeandtemp.com
www.cdn-timeandtemp.com

