



THE TIME & TEMPERATURE COMPANY®

Model: TMW1


## Waterproof Timer

Counts 100 minutes by seconds

### Features

- Waterproof
- Shatterproof
- Counts up & down
- Big digit
- Loud & long audio/visual alarm
- Stop and restart
- Last count recall
- Counts up after zero
- 2-way mounting: magnet/stand
- Batteries & instructions included

**Note:** Remove sticker from display before use.

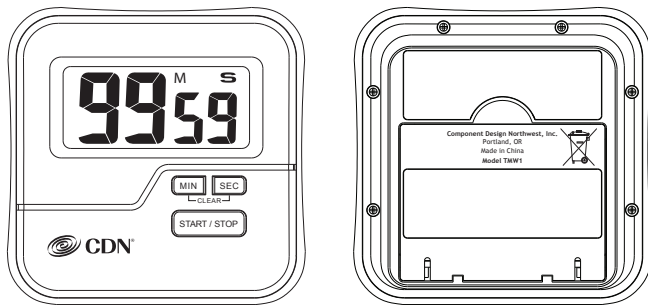

**Note:** In the following instructions, names of the control buttons are shown in CAPS. Function information that appears on the display is shown in BOLD CAPS.

### Battery Installation

Replace battery when LCD becomes dim or alarm level declines.

1. Pull stand out.
2. Remove battery cover using a screwdriver or coin.
3. Install two 1.5V AAA batteries observing polarity shown in compartment. A brief alarm sounds.

**Note:** The gel in the battery compartment is required for waterproofing.

4. Replace the battery cover making sure that gasket remains in groove.

### Operating Instructions

#### A. Count Down

1. Press the MIN and/or SEC buttons to enter the desired time. Press and hold for fast advance.
2. Press the START/STOP button to start counting down. **M** and **S** flash on the display.
3. Press the START/STOP button to interrupt the count. Press START/STOP again to resume the count.
4. The audio/visual alarm sounds and the timer counts up when the count reaches **00:00**.
5. The audio/visual alarm stops automatically after 60 seconds while the flashing and count up continues. Press START/STOP to stop the alarm and the count up. The last count is recalled.
6. When timer is stopped, press both MIN and SEC buttons simultaneously to reset to **00:00**.

#### B. Count Up

1. When timer is stopped, press both MIN and SEC buttons simultaneously to reset to **00:00**.
2. Press the START/STOP button to begin the count up. **M** and **S** flash on the display.
3. Press the START/STOP button to interrupt the count. Press START/STOP again to resume the count.
4. Press both MIN and SEC buttons simultaneously to reset to **00:00**.

### Care of Your Product

- Avoid exposing your timer to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agent.
- Wipe clean with a damp cloth.

**CE Note:** This device could be sensitive to electrostatic discharge. If electrostatic discharge or malfunctioning occurs, please re-install the battery to reset this unit.

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



**5-Year Limited Warranty:** Any instrument that proves to be defective in material or workmanship within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947. This warranty does not cover damage in shipment or failure caused by tampering, obvious carelessness or abuse.



**Component Design Northwest, Inc.**

PO Box 10947  
Portland, OR 97296-0947

Tel 800 338-5594

Fax 800 879-2364

[info@cdn-timeandtemp.com](mailto:info@cdn-timeandtemp.com)

[www.cdn-timeandtemp.com](http://www.cdn-timeandtemp.com)

