

# GRINDMASTER

# Preventative Maintenance Kit

## Applicable Models:

LOLA6 machines

## PM Frequency:


Every 12 months

## Parts Included:

- Lubricant tube (04.ZZ0597.001)
- Faucet piston lower O-Rings (04.CC0041.001)
- (2) Faucet piston upper O-Rings (04.CC0048.001)
- Bowl gasket (02.CC0146.001)
- Mixing element (02.CC0143.BLB)

## Descriptions and Instructions:

1. Disassemble the tap
2. Replace both the 2 upper (14) and the lower (5) O-rings.
3. Disassemble the bowl.
4. Replace the bowl gasket and the mixing element.
5. Lubricate as indicated in the Operator's Manual.

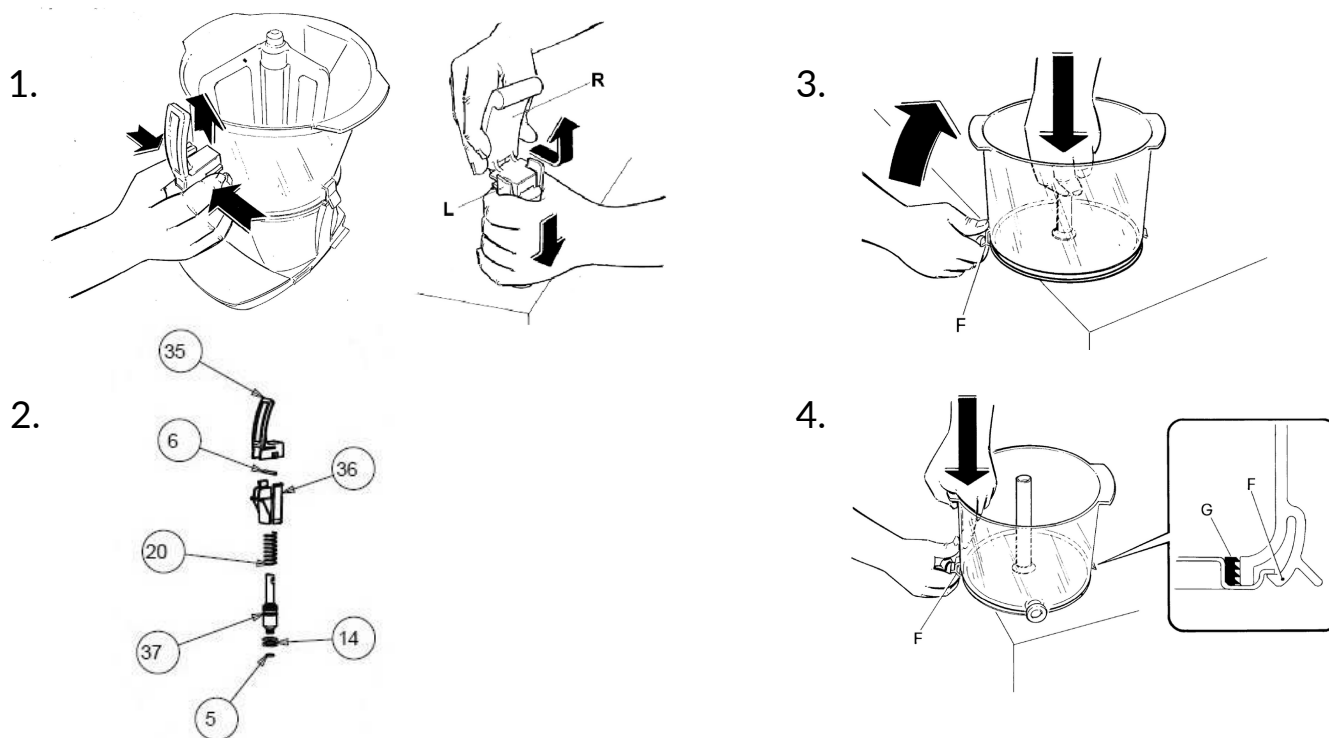

Operator Manuals, including use and care instructions as well as product video tutorials, can be found on our website or by calling Technical Support (select 1 for technical service)

390-00270 rev 2

4003 Collins Lane, Louisville, KY 40245 USA  
Phone: 502.245.4776 • Toll Free: 800.695-4500  
ccamericas@electroluxprofessional.com  
grindmmaster.com

Part of



Electrolux  
Professional  
Group