



## **CEADO FRUIT & VEGETABLE JUICERS:**

### **KEY OPERATION POINTS**

- The proper order to remove the parts when disassembling the juicer is:
  - Remove Food pusher(s)
  - Release the locking arm by placing your thumbs under the arm, place your remaining fingers on the feed chute(s) for support and lift up and pull forward
  - Remove Juicer Cover
  - Remove basket assembly (note it is magnetized and no tool is required to remove it)
  - Remove pulp retainer (make note of how it is placed on the juicer between the bowl and cover)
  - Remove bowl
- Reassemble in the reverse order and be sure the internal edge is facing up on the pulp retainer; also, make sure the basket's clutch disc is correctly inserted on the drive disc
- Make note of the On/Off Switch and the Start/Stop button. NOTE: DO NOT USE AN ADAPTOR PLUG
  - Make sure the On/Off button is in the "off" position and the locking arm is hooked onto the juicer cover
  - Turn the juicer on by pushing the on/off button in the "on" position
  - Turn on the motor by pushing the START button
  - Turn the motor off by pushing the STOP button
  - Always wait until the motor comes to a complete stop before unhooking the locking arm
  - NOTE: On the ES-500, the on/off button is on the right side of the juicer (different than the ES-700)
- You are now ready to juice. Use the food pusher to gradually push down the fruit and/or vegetables towards the spinning grating disc at the bottom of the feed chute without exerting excessive pressure.
- Cleaning Process
  - To reduce the cleaning procedures to a minimum, we suggest placing a plastic bag inside the pulp container
  - To clean the juicer cover, bowl, basket, pulp container, pulp retainer and food pusher, rinse under running water and wash with warm water and mild liquid detergent. Rinse and dry.
  - The removable parts, except the pulp container and juice cover, are dishwasher safe. DO NOT IMMERSE THE PULP CONTAINER IN HOT WATER.
    - NOTE: The cover is made of anodized aluminum. Do not place in the dishwasher.
  - To get the highest yield of juice, always clean the basket with the nylon brush provided. Put the basket under running water and use the brush to clean the inside of the strainer, as it lengthens its lifespan. You can also immerse the basket in a solution of hot water with 12% lemon juice or vinegar to loosen any blocked material. Leaving the basket to soak overnight will also help to thoroughly clean it.
    - DO NOT USE ABRASIVE PRODUCTS OR SPONGES TO CLEAN THE BASKET. NEVER USE BLEACH OR CHLORINE-BASED CLEANING PRODUCTS ON THE JUICE EXTRACTOR.
  - Clean the juicing basket about every 40 lbs. of fruits/vegetables for the ES-700 and 30 lbs. for the ES500. Do not let traces of fruit or vegetables dry and harden on the pulp container, basket, juicer cover or food pusher, as it could create noise and reduce the yield of the juice.

**MULLIGAN ASSOCIATES, INC.**

**286 Barbados Drive, Jupiter, FL 33458**

**Phone: (800) 627-2886, Fax: (561) 277-2466**

**Website: [www.juicernet.com](http://www.juicernet.com)**