



Merrychef Oven Cleaner

Merrychef Oven Cleaner is **specifically formulated** for Merrychef combination ovens. The use of any oven cleaning products not recommended by Merrychef could result in damage to the oven and invalidate the product warranty.

REFER TO OVEN USER GUIDE

Ensure oven is switched off. Do not spray Oven Cleaner into the rear/side cavity filter box. For best results use on warm surfaces. Spray Oven Cleaner liberally onto the surface and work into soiled areas then rinse / wipe away. For difficult to clean areas, spray onto area and allow to soak for 10 minutes before cleaning. Leave the oven door open during cleaning. For best results use in conjunction with Merrychef Oven Protector.

DO NOT SPRAY DIRECTLY ONTO THE DOOR SEAL.

HEALTH & SAFETY: Causes serious eye damage. Causes skin irritation. Keep out of reach of children. Do not breathe spray.

Wear eye protection. Wear protective gloves.

Contains 1.9% 2-Amino ethanol (CAS No. 141-43-5).

If swallowed immediately give a glass full of water.

Wash hands thoroughly after handling. **IF ON SKIN:** Wash with plenty of soap and water. Take off contaminated clothing and wash before reuse. If skin irritation occurs: Get medical advice.

IF IN EYES: Rinse cautiously with water for several minutes.

Remove contact lenses, if present and easy to do. Continue rinsing.

If eye irritation persists: Get medical advice/attention.

IF SWALLOWED: rinse mouth. Do NOT induce vomiting.

Immediately call a POISON CENTRE or doctor.

Storage, disposal, spills: Store in original container out of reach of children.

Do not reuse this container. Clean up spills immediately. Contain and absorb spills with inert material or vermiculite. **Fire fighting:** Water.

For SDS information please visit Merrychef.com

When reordering please state part number 32Z4022

Merrychef USA, 18301 St. Clair Avenue,

Cleveland, OH 44110

Web: www.merrychefusa.com

Tel: (888) 417-5462 8:00am to 5:00pm EST



Danger

750ml

25.36 fl oz

Made in England