

Merrychef Oven Protector is a **specially formulated** protective treatment for Merrychef combination ovens.

The use of any oven protection products not recommended by Merrychef could result in damage to the oven and invalidate product warranty.

REFER TO OVEN USER GUIDE

Oven Protector is not a cleaner. It is a barrier coat to be left on during oven usage. Oven Protector should be used every day on cold/clean ovens. Spray Oven Protector into the oven cavity. Do not spray Oven Protector into the rear/side cavity filter box. Use a sponge to spread the Oven Protector thinly and evenly across all internal surfaces excluding the cavity filter. Once coated heat oven for 30 minutes to cure. Do NOT SPRAY DIRECTLY ONTO THE DOOR SEAL.

HEALTH & SAFETY: Causes skin irritation. Causes serious eye irritation. Precautionary Statements: Wear eye protection. Do not breath spray. Wash hands thoroughly after handling.

IF IN EYE: Rinse cautiously with water for several minutes.

IF IN EYE: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. If eye irritation persists get medical attention. IF ON SKIN (or hair): Rinse skin with water. If skin irritation occurs:

Get medical advice. Take off contaminated clothing and wash before **Warning** reuse. IF SWALLOWED: rinse mouth. Do NOT induce vomiting.
Call a POISON CENTRE or doctor if you feel unwell. Keep out of reach of children.
Storage, disposal, spills: Store in original container out of reach of children.
Do not reuse this container. Clean up spills immediately. Contain and absorb spills with inert material or vermiculite. **Fire fighting**: Use water.

For SDS information please visit Merrychef.com
When reordering please state part number 32Z4023
Merrychef USA, 18301 St. Clair Avenue,
Cleveland, OH 44110
Web: www.merrychefusa.com
Tel: (888) 417-5462 8:00am to 5:00pm EST

Made in England