


**15256** MSLV-9 = 120 Volt / ½-2 HP / 1 Phase

**15256A** MSLV-10 = 208-240 Volt / ½-2 HP / 1 Phase

**15256B** MSLV-11 = 208-240 Volt / ½-10 HP / 3 Phase

**15256C** MSLV-12 = 380-460 Volt / ½-10 HP / 3 Phase

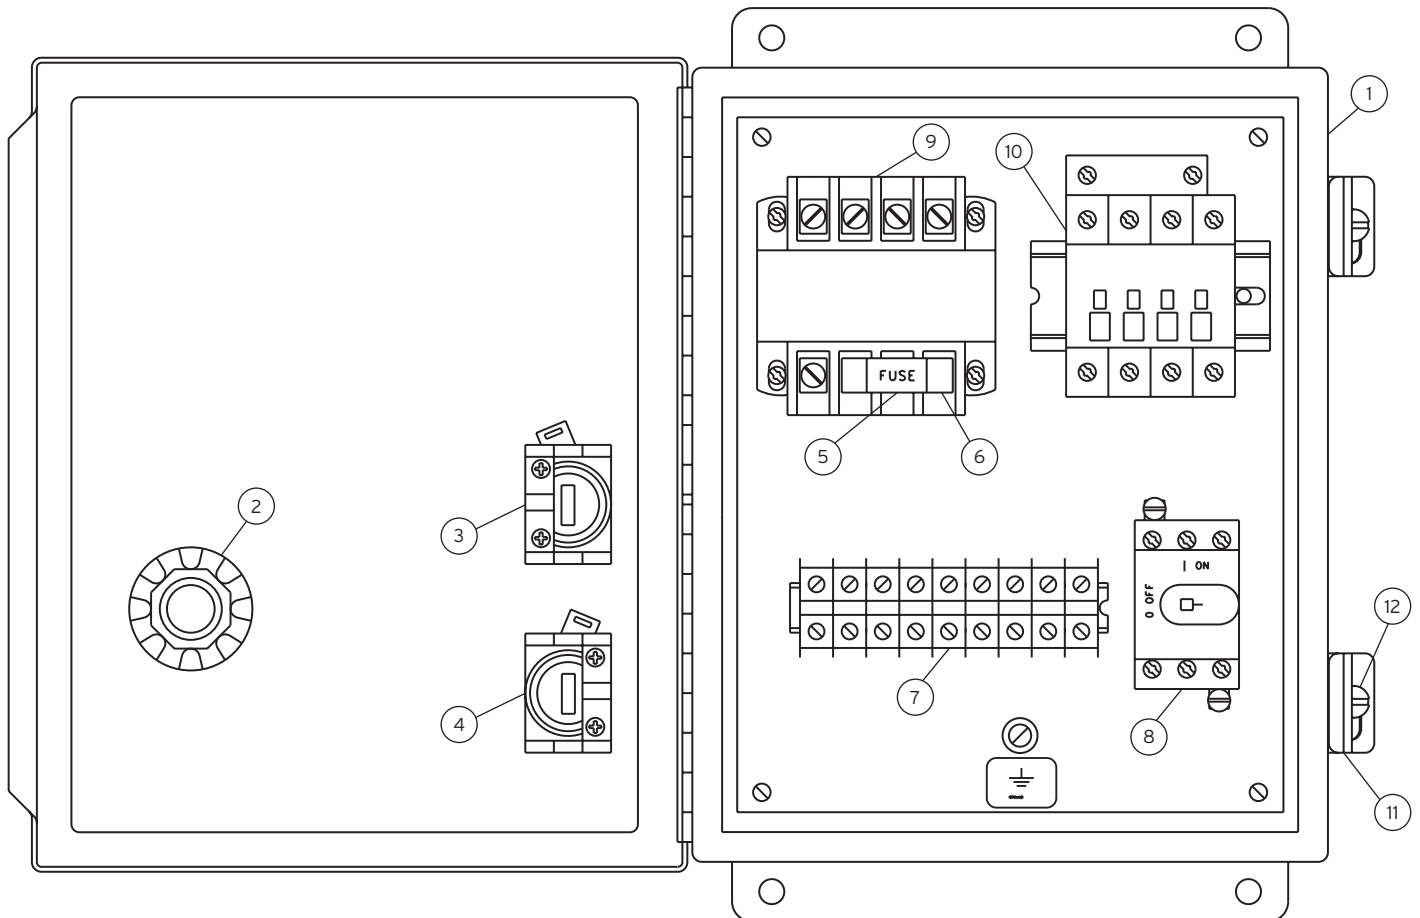

Order By Part Number, Not Code Number

CODE #	PART #	QTY	DESCRIPTION
1	N/A	1	Stainless Steel Enclosure
2	14397	1	Door Disconnect Knob & Shaft
3	14159	1	Pushbutton Start (N.O. Black)
4	14158	1	Pushbutton Stop (N.C. Red)
5	13466	1	Fuse (2 Amp - 125 Volts) (FNA-2 or FNM-2)
6	14165	2	Fuse Holder
7	16192-ISE	1	Terminal Block Assy, 1PH
	16192A-ISE	1	Terminal Block Assy, 3PH
8	14167	1	Door Disconnect Switch

CODE #	PART #	QTY	DESCRIPTION
9	14185	1	Transformer - 3 Phase
	14161	1	Transformer - 1 Phase Contactor
10	15275	1	Contactur (MSLV-9, MSLV-11)
	15276		Contactur (MSLV-10, MSLV-12)
11	13935	2	Top Cover Retainer
12	13942	2	Screw
	13625	2	Tamperproof Screw (Not Shown)
	14494	2	Solenoid Valve - 24 Volt Coil (Not Shown)