



FOOD EQUIPMENT

Operating and Maintenance Instructions

Model: 6002 Infra-red Bulb Warmer

INTRODUCTION

1. Please read instructions before using this appliance.
2. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury.
3. Clean machine thoroughly before and after all uses following cleaning instructions below.

ELECTRICAL REQUIREMENTS

1. Wire warmer into a grounded circuit with correct voltage and sufficient power capacity. Refer to the product label (serial plate) on the warmer for voltage and wattage requirements.
2. **All electrical connections must be made according to local codes by a licensed electrician.**

SAFETY INSTRUCTIONS

1. **Warning!** All power must be disconnected at power source before any service procedure is performed.
2. This appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as drapes and other furnishings, away from appliance.
3. Extreme caution is necessary when any appliance is used by or near children and whenever the appliance is left unattended.
4. Do not operate any appliance after it malfunctions, has been dropped, or damaged. Return appliance to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
5. Do not use outdoors. This appliance is not intended for use in wet or moist locations. Never locate appliance where it may fall into water.
6. This appliance has electrical parts. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
7. Turn warmer off when not in use.

INSTALLATION INSTRUCTIONS

Note: Installation must be made by a licensed electrician.

1. Install bulb warmer so BULB hangs approximately 13 inches above food container and 5 inches away from walls.
2. Remove ring nut from ROMEX CONNECTOR, secure ROMEX CONNECTOR to CROSS BAR with ring nut.
3. Feed CORD through SLIP RING, CEILING CANOPY, ROMEX CONNECTOR, & CROSS BAR.
4. Connect all wires (including ground) to wires in the junction box (wire nuts included); mount the CROSS BAR to the junction box.
5. Secure CORD with ROMEX CONNECTOR by tightening the (2) screws.
6. Fit the CORDGRIP on the wire; insert CORDGRIP into the SLIP RING, aligning the locking portion of the CORDGRIP with the SCREW in the SLIP RING.
7. Slide the CORDGRIP, SLIP RING and CEILING CANOPY along the wire against the ceiling until the SLIP RING is against the CEILING CANOPY.
8. Tighten the SCREW in the SLIP RING against the CORDGRIP to hold the CEILING CANOPY against the ceiling.
9. If unit fails to work properly when first operated call NEMCO customer service at 1-800-782-6761.

OPERATION

1. Place food products in a pan, located directly under the BULB for best results.
2. Turn warmer off when not in use.

CLEANING

NOTE: Proper maintenance plays an important part in the life span and functioning of the warmer.

1. Turn warmer off before cleaning.
2. Clean warmer with a damp sponge and mild soap. Do not immerse in water or other liquid.

TROUBLESHOOTING

Lights not on	Check if unit is plugged in and power switch is turned to "ON" position
	Check power at receptacle
	Check if Bulb has blown
Loose Sockets	Turn off power and check if socket is loose or broken. Remove light bulb and tighten socket screws as necessary.
Loose Hoods	Turn off power check if hood is loose. Remove light bulb and tighten hood screws as necessary.
Unit Blows Fuse or Circuit Breaker	Check to make sure circuit is not overloaded.

Service Part List
Model: 6002 Infra-red Bulb Warmer

