LIFESTOR® Shelving


ASSEMBLY INSTRUCTIONS

CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE.

SAVE YOUR BOX AND ALL PACKING MATERIALS.

YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

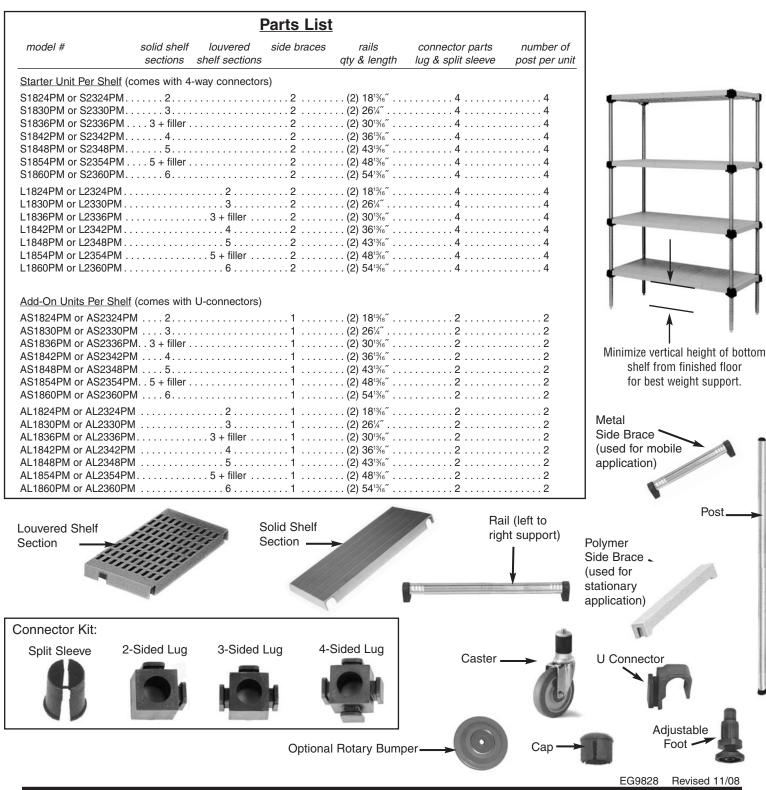



- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A. www.eaglegrp.com
- Phone: 302/653-3000 (Foodservice) 800/441-8440 (MHC/Retail) 800/637-5100
- Fax: 302/653-2065

LIFESTOR® Shelving

ASSEMBLY INSTRUCTIONS



figure 1

figure 2 (stationary unit shown)

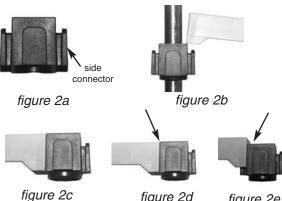


figure 2d correct

figure 2e incorrect





figure 3a correct



figure 3b incorrect

First determine the spacing of the shelf levels. The posts are grooved on increments to facilitate alignment.

Lug Connectors

Place split sleeve on appropriate groove, then slip lug over split sleeve. See figure 1.

Side Braces

Attach side braces between posts to create "ladder" by sliding the side brace down onto the side connector of the lug until it is flush. See figure 2, 2a, 2b and 2c. Ensure that side connector of the lug is flush with the bottom of side brace by tapping gently with rubber mallet. See correct and incorrect figures 2d and 2e.

NOTE: THIS ASSEMBLY MUST BE COMPLETED BEFORE ATTACHING RAILS.

CAUTION: Stationary units use polymer side braces, and mobile units use metal side braces.

Rails

Attach rails between ladders to complete frame structure. See figure 3. Ensure that rail is flush with the bottom of the side connector by tapping gently with rubber mallet. See correct and incorrect figures 3a and 3b.

Shelf Sections

For Stationary Applications:

Place shelf sections on front and rear rails. At the installed location, utilize front leveling feet to pitch shelving to the rear when mounted against a wall. See figure 4 - an example of unit placed against a wall and slightly pitched.

For Mobile Applications:

Caster Assembly: Assemble caster and optional rotary bumper per figures 5 and 6. Install into post by tightening top nut until applicator starts to expand. Insert caster into leg. If it does not fit snug, tighten top nut again. When caster is tight in leg, tighten bottom nut. See figure 7.


Place shelf sections on front and rear rails.

CAUTION: Stainless steel or zinc side braces are required for use with casters.




(exaggerated for illustrative purposes) figure 4

shelving unit pitched

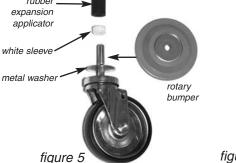



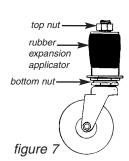



- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A. www.eaglegrp.com
- Phone: 302/653-3000 (Foodservice) 800/441-8440 (MHC/Retail) 800/637-5100
- Fax: 302/653-2065