

## InstaCut™ 3.5 Blade Replacement Instructions

To ensure safe installation and operation, read the following statements and understand their meaning. Please read carefully.

### WARNING

Warning is used to indicate the presence of a hazard that *can* cause severe personal injury, death, or substantial property damage if the warning is ignored.

	 <b>WARNING</b>
	<b>Sharp Blade Hazard.</b> Blades are sharp and can cause cuts and amputation.
To avoid injury from sharp blades, handle with caution. Only trained personal should operate equipment or preform maintenance.	


### INSTALLATION PROCEDURES

Wash new blades with warm, soapy water and rinse thoroughly to remove the thin protective oil film. Keep the sharp edge away from you when handling blades.

1. Familiarize yourself with the parts diagram for your equipment.
2. Remove the pusher head assembly:  
**Tabletop models.** Slide the pusher head off the rod guides.  
**Wall mount models.** Remove the pin. Lift handle and slide the pusher head off the guide rods. Place pin back into the hole on the handle assembly to prevent loss.
3. Raise the bumpers approximately 2" (5.0 cm).
4. Loosen thumbscrew and carefully remove the blade assembly. Remove the cutting blade assembly by pressing upwards on the bottom of the side of the blade holder, where the thumbscrew is located. Discard the old blade assembly.
5. Install the new cutting blade assembly by inserting the tab on the blade holder into the groove in the base, then lowering the blade holder into the seated and flush position in the base. Tighten the thumbscrew.
6. Slide bumpers down guide rods to contact base assembly. Position pusher head assembly onto the guide rods, slowly lower pusher head assembly, and check pusher head block to blade alignment.
7. Lubricate the guide bar with mineral oil or Petro Gel after each use. Do not use cooking oil as it will become sticky and may permanently damage the equipment.

### SPARE PARTS LIST AND EXPLODED VIEW - INSTACUT 3.5W (WALL MOUNT)

Callout	Description
A	Lock Nut
B	Pull Pin w/ Ring 1 1/4" Long
C	Pusher Head Block, 3/8"
	Pusher Head Block, 1/4" & 1/2"
D	Rubber Bumper, 3/8" I.D.
E	Blade Holder
F	Screw, Shoulder
G	Handle Link
H	Base
I	Guide Rod
J	Pusher Head Casting w/ Bearings
K	Thumbscrew
L	Pusher Head
M	Nutblock, Hex
N	D-Handle, Rubber Coated
O	Blade
P	Blade, Dice

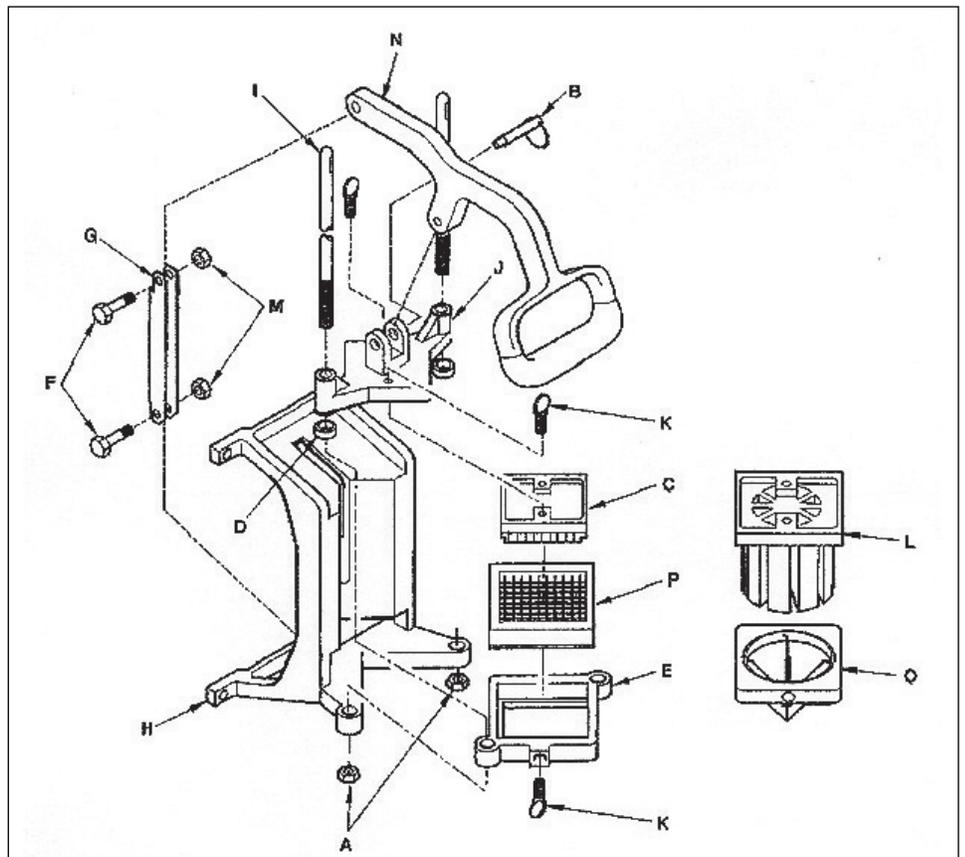


# SPARE PARTS LIST AND EXPLODED VIEW - INSTACUT 3.5

Callout	Description
A	Screw, Hex Head Stainless
B	Black Rubber Foot, Screw On
C	Base (includes Guide Rods)
D	Pusher Head Casting (includes Bearings)

Callout	Description
E	Pusher Head Block
F	Bumper
G	Suction Foot
H	Guide Rod, 3/8" Diameter
I	Thumbscrew

Callout	Description
J	Pusher Head
K	Lock Nut 5/16" x 18, UNC
L	Thumbscrew
M	Blade, Wedge
N	Blade, Dice

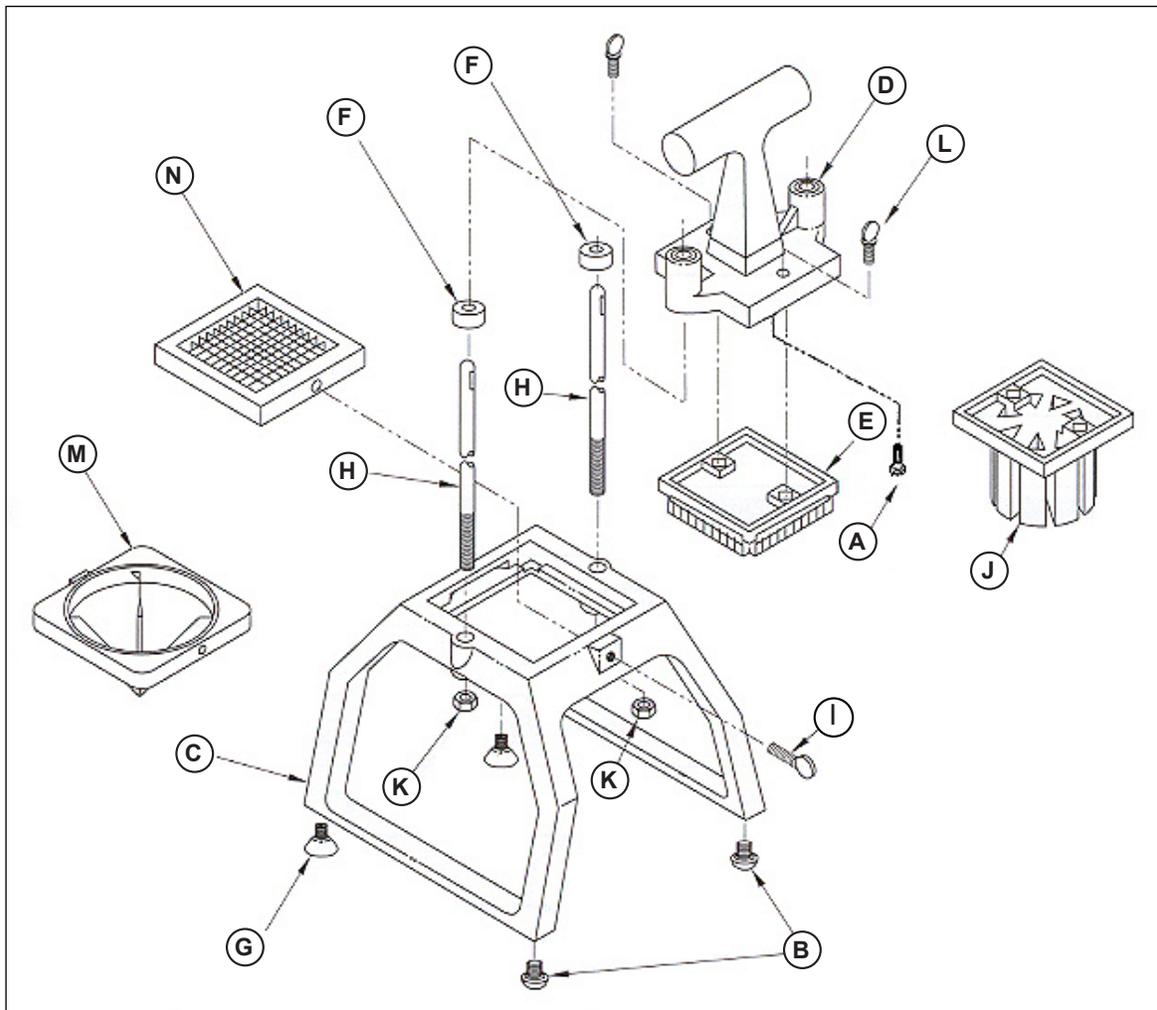

www.vollrathco.com

The Vollrath Company, L.L.C.  
 1236 North 18th Street  
 Sheboygan, WI 53081-3201  
 U.S.A.

Main Tel: 800.628.0830  
 Fax: 800.752.5620

Technical Services: 800.628.0832  
 Service Fax: 920.459.5462

Canada Service: 800.695.8560

© 2010 The Vollrath Company, L.L.C.