



Installation Instructions for **TABLE MOUNTED DISH RACK SORTING SHELVES**



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Table Mounted Sorting Shelves manufactured by **ADVANCE TABCO®** are designed and constructed store/drain Dish Racks used in a Commercial Dishwasher. **ADVANCE TABCO®** does not recommend use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

INSTALLATION INSTRUCTIONS

Contents:

- (2) End Panels
- (5) Stainless Steel Cross Tubes
- (2) Stainless Steel Cross Tubes with Welded Tubular Uprights

Mounting Hardware:

(18 Flat Button Head Bolts)

Tools Required:

7/32" Allen Wrench

NOTE: DTA-79 May come Pre-Assembled From Factory Where Special Applications Exist


Step 1:

Determine type of shelf option that will be used for the DTA-79.



OPTION 1
For Single Side Use

Only 1 Cross Tube will be used across the top using the middle single hole.

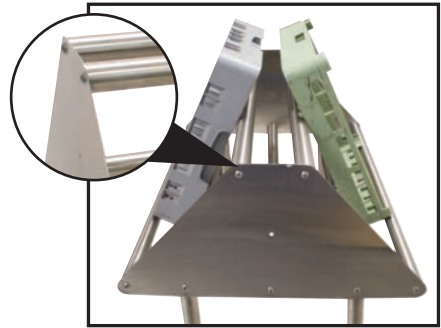


OPTION 2
For Double Side Use

2 Cross Tubes will be installed at the top using the two top holes.

Step 2:

Align (2) Cross Tubes with welded Tubular Upright at the Second Hole in on each End Panel. Secure with Button Head Bolts provided (**Figure 1**).

NOTE: Ensure Cross Tubes with Welded Uprights match at each end & are perpendicular to bottom edge of side panel.

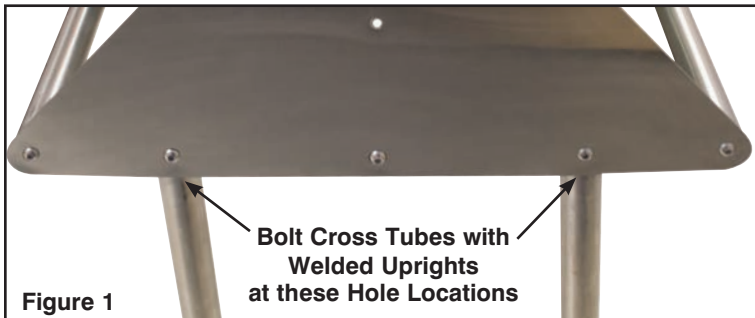

Step 3:

Align the remaining Cross Tubes between End Panels & Secure with Button Head Bolts (**Figure 2**) based on option selected in **STEP 1**.



Figure 2

Step 4:

Mount DTA-79 to Dishtable - Align Notched posts with holes in roll rim (**Figure 3**) and Flat Bottom Posts with Elliptical Holes in Backsplash (**Figure 4**). Slide Uprights thru Elliptical Holes so Posts rests on Bracket and Notched Uprights rest on Roll Rim.

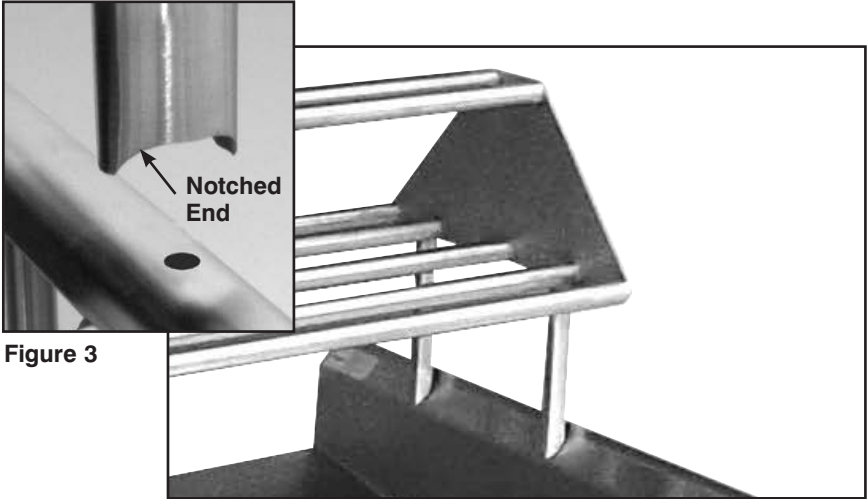


Figure 3

Insert Button Head Bolts (Provided) thru Brackets into Tubes and tighten (**Figure 5**).


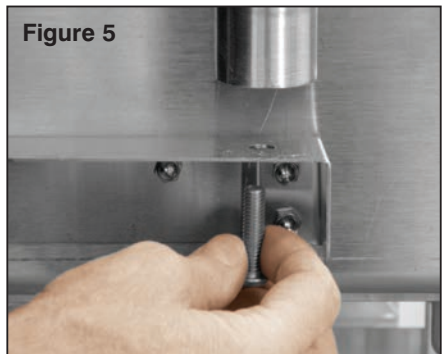


Figure 5

... Continued

Insert Button Head Bolts (Provided) thru bottom of Roll Rim into Tube and tighten. **Figure 6.**

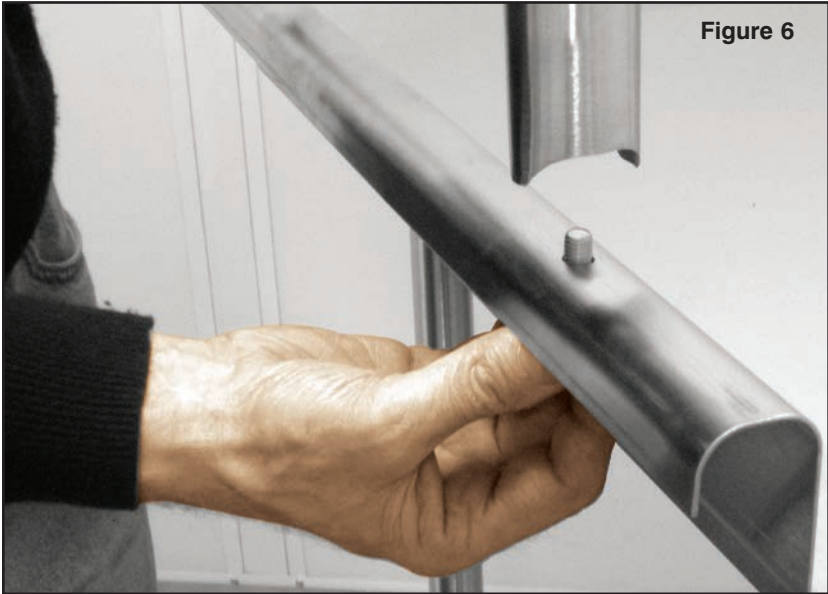

Step 5:

Tighten all Bolts. Seal Joints with N.S.F. Approved Silicone Sealant where Notched Uprights meet Roll Rim (Where uprights pass thru elliptical holes in backslash and Bolt Heads).

