


*(Continued from previous page)*

**STEP 5:**

- a) Stand rack up right on flat level surface.
- b) Make sure all casters are touching surface.
- c) Firmly tighten all bolts.

**DO NOT OVER TIGHTEN TO  
AVOID STRIPPED THREADS.**

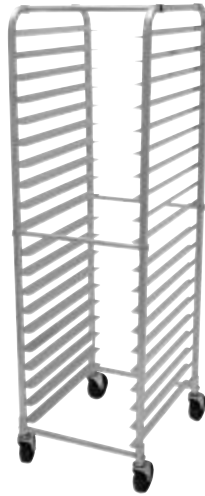

Edgewood, New York 11717-8380

2/07 PAN RACKS



## Installation Instructions for KNOCK DOWN PAN RACKS



**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Pan Racks manufactured by **ADVANCE TABCO®** are designed and constructed for the use of pan storage and transport and the like. **ADVANCE TABCO®** does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

# KNOCK DOWN PAN RACK

## KNOCK DOWN PAN RACK CARTON CONTENTS:

Quantity	Part Description
(4)	3/4" Dia. Round Cross Braces
(2)	1" Round Cross Braces
(2)	Side Frames
(8)	1/4"-20 x 1" Long Hex Bolts
(4)	3/8"-16 x 1 3/4" Long Hex Bolts
(8)	"U" Washers
(4)	Casters

**TOOLS REQUIRED:** One 7/16" open end wrench.  
One 9/16" open end wrench.

**STEP 1:** Check to ensure all parts are accounted for.

### STEP 2:

- Insert the (4) 3/4" dia. cross braces into the holes of one side of frame.
- Insert the 1/4-20 x 1" hex bolts through the "U" washers (**figure 1**).
- Thread 1/4-20 x 1" hex bolts into the ends of 3/4" cross braces, hand tighten.



Figure 1

### STEP 3:

- Lay frame on floor with (4) cross braces facing up (**figure 2**).
- Position the opposing side frame onto cross braces, aligning holes (**figure 3**).
- Thread into the ends of 3/4" cross braces, hand tighten.



Figure 2



Figure 3

### STEP 4:

- Insert (4) casters into bottom of side frames. Make sure the holes in the casters line up with the holes in the frame (**figure 4**).
- Align 1" diameter cross brace with bottom hole of side frame and thread 3/8"-16 x 1 3/4" bolts through frame and into end of 1" cross brace (**figure 5**).



Figure 4



Figure 5