

Step 6:  
Repeat Steps 1 - 5 for remaining two posts.

Step 7:  
Place wire shelving onto shelving brackets (Illustration 7).



Step 8:  
Place collar filler caps onto shelf (Illustration 8).




**ADVANCE TABCO®**  
Edgewood, New York 11717-8380

ATPWS 4-00



## Installation Instructions for ADJUSTABLE 2-TIER SHELVING POSTS

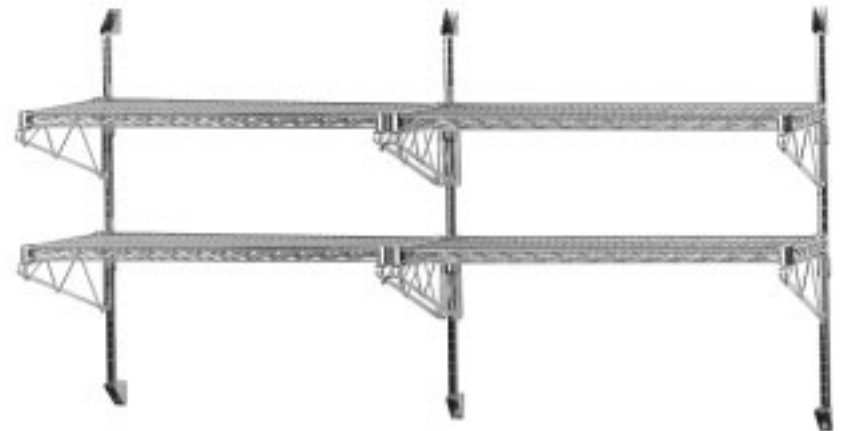

**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

ADVANCE TABCO Wire Shelving is recommended for practical storage applications. ADVANCE TABCO does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

# Installation Requirements

## Contents:

- (2) 34" End Mount Posts
  - (4) End Mount Shelving Brackets
  - (1) 34" Mid Mount Post
  - (2) Mid Mount Shelving Brackets
  - (6) Post Wall Mounting Brackets and Bolts
  - (3) Center Support Brackets
- Mounting hardware provided  
Use desired shelves (14" or 18" widths only)

## Tools Required:

- Drill Gun with philips head bit
- Screw Driver

Use of anchors is recommended when there is no stud in wall.

### Step 1:

Mark the wall so post mounting brackets are 34" apart (Illustration 1). Drill post mounting bracket into wall (Illustration 2).

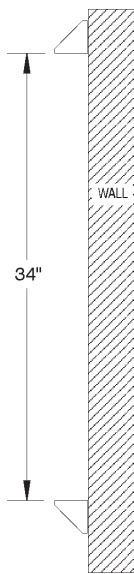


Illustration 1



Illustration 2

### Step 2:

Place tapered split sleeve on bottom portion of post at desired position (Illustration 3).



Illustration 3

### Step 3:

Slide shelving bracket onto post (Illustration 3). Then slide center support bracket onto post (Illustration 4). Place tapered split sleeve on top portion of post at desired position. Then slide next shelving bracket onto post.



Illustration 3

Illustration 4



### Step 4:

Bolt post onto post mounting bracket (Illustration 5)



Illustration 5

### Step 5:

Position center support bracket and secure into wall (Illustration 6).



Illustration 6