

C1448, C1848, C2148 Service Parts

This part list contains the service parts for the air cooled, water cooled and remote air cooled C1448, C1848, C2148 ice machines.

To avoid costly and time consuming errors, double check the model and voltage before ordering a part.

The above have been manufactured in several voltages, which are designated by a voltage code after the hyphen (-) in the model number. Codes used included:

-32 = 208-230/60/1

-3 = 208-230/60/3

-6 = 230/50/1

-63 = 30/380-420/50/3

There was also a panel change in late 2009, denoted by a B at the end of the model number.

D series models began late 2014 and E began late 2017

Note: These abbreviations are used in this list:


- AC = Air Cooled
- WC = Water Cooled
- RC = Remote Cooled
- HGV = Hot Gas Valve
- TXV = Thermostatic Expansion Valve
- Volt = Voltage
- Sol Vlv = Solenoid Valve
- Hdwe = Hardware

Contents

Cabinet - A Series	Page 2
Cabinet - B Series	Page 3
Cabinet - D and E Series.	Page 4
Interior Parts	Page 5
Evaporator Compartment	Page 6
Air Cooled Refrigeration System	Page 7
Air Cooled Fan Area	Page 8
Water Cooled Refrigeration	Page 9
Remote Refrigeration System	Page 10
Electrical and Control Box, -3, -6, -32	Page 11
Electrical & Control Box, 400 volt, 50 Hz. 3 phase w/neutral (-63)	Page 12
Compressors	Page 13
Remote Condenser, ERC311 and ERC611.	Page 14

C1448, C1848, C2148 Service Parts


Cabinet - A Series

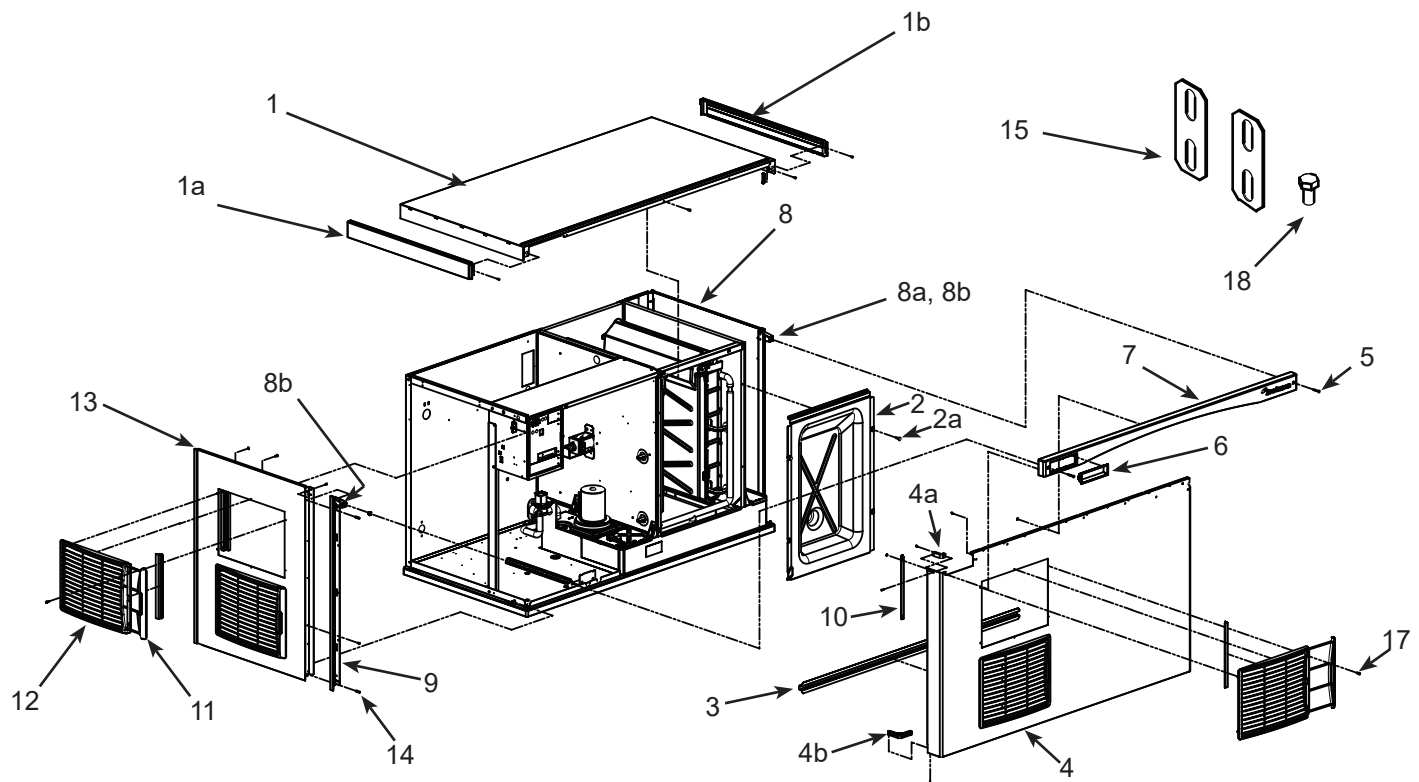

Item Number	Part Number	Description	Item Number	Part Number	Description
1	A38941-023	Top panel, w/trim strips	8	A38553-022	Right side panel assy
1a	02-4221-01	Left trim strip	8a	02-4215-01	Receptacle
1b	02-4221-02	Right trim strip	8b	03-3804-01	Screw receptacle
2	02-4184-01	Evaporator cover	9	02-4067-03	Side panel support. Fits water cooled and remote models. Used as back side panel support for air cooled.
2a	03-0727-05	Screw		02-4067-04	Front side panel support for air cooled models
3	A39045-001	Front panel stiffener	10	A39222-001	Filter guide
4	A38552-025	AC Front panel assembly, includes filters, trim strip, gussets and labels.	11	02-4212-01	Air filter
	A38552-024	WC, or RC front panel assembly, includes trim strip, gussets and labels	12	02-4224-01	Louver panel
4a	02-4216-01	Top gusset	12a	A39238-001	Louver bracket
4b	02-4217-01	Bottom gusset	13	A38551-023	Left side panel, AC
5	03-1735-03	Screw, front panel		A38551-024	Left side panel WC, RC
6	02-4284-01	Bezel, full window	14	03-1404-12	Screw
6a	02-4284-02	Bezel, partial window	15	A30911-015	Machine straps
7	02-4214-03	Trim strip	16	16-0355-00	Inlet water fitting, flare
			17	03-1419-17	Flat head screw
			18	03-1405-15	Screw

C1448, C1848, C2148 Service Parts

Cabinet - B Series

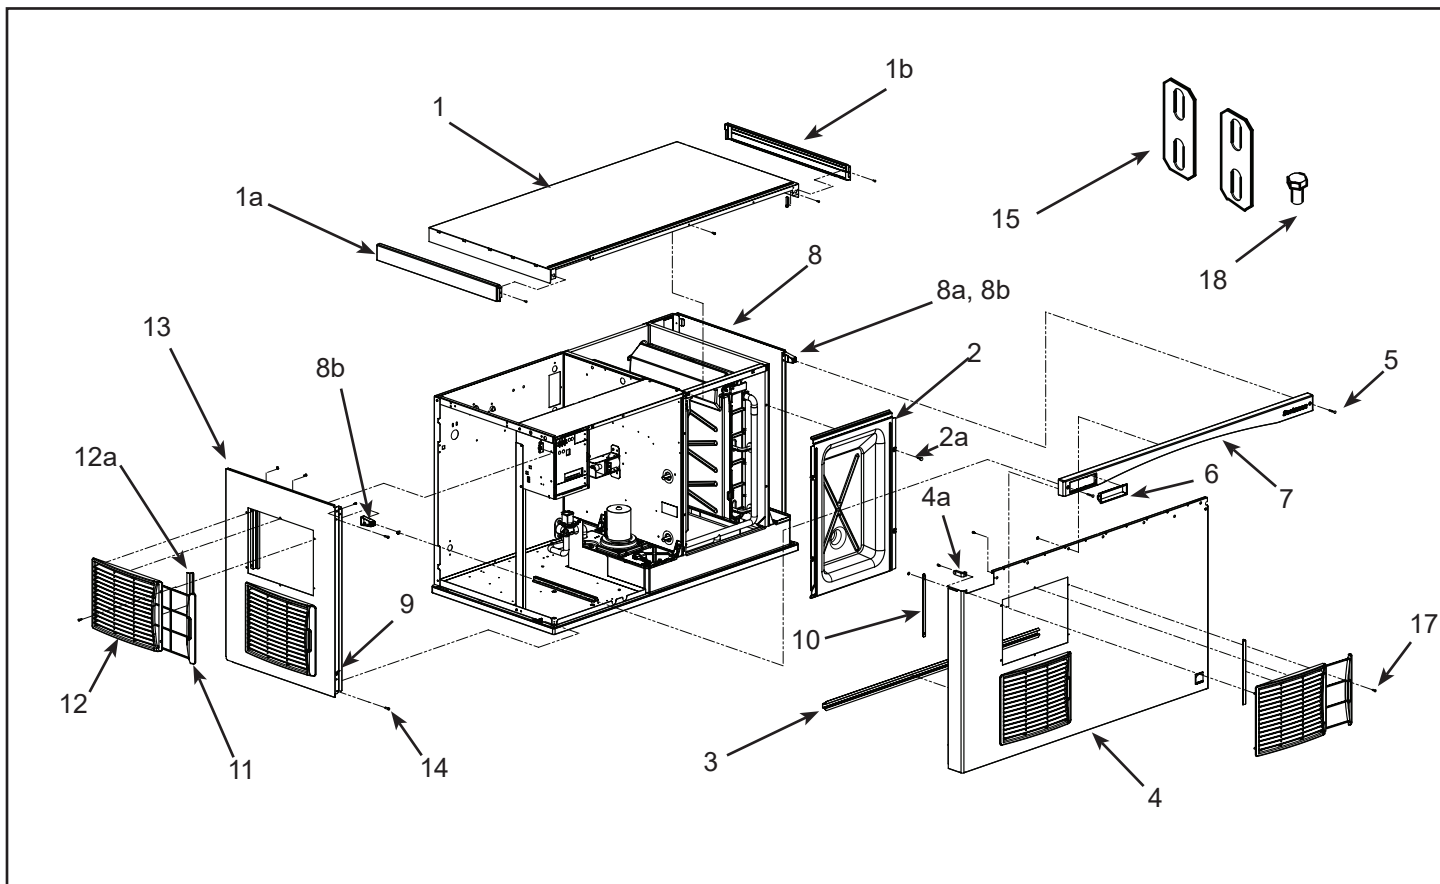


Item Number	Part Number	Description	Item Number	Part Number	Description
1	A39579-023	Top panel	8b	03-3804-01	Screw receptacle
1a	02-4221-01	Left trim strip*	9	A39571-001	Panel clip
1b	02-4221-02	Right trim strip*	10	A39238-001	Filter guide
2	02-4184-01	Evaporator cover	11	02-4212-01	Air filter
2a	03-0727-05	Screw	12	02-4224-01	Louver panel
3	A39045-001	Front panel stiffener	12a	A39238-001	Louver bracket
4	A39578-025	AC Front panel assembly, includes filters, trim strip	13	A39580-026	Left side panel, AC
	A39578-024	WC, or RC front panel assembly, includes trim strip		A39580-024	Left side panel, WC, RC
4a	02-4216-01	Top gusset	14	03-1404-12	Screw
5	03-1735-03	Screw, front panel	15	A30911-015	Machine straps
6	02-4284-01	Bezel, full window	16	16-0355-00	Inlet water fitting, flare**
6a	02-4284-02	Bezel, partial window**	17	03-1419-17	Flat head screw
7	02-4214-03	Trim strip	18	03-1405-15	Screw
8	A39581-022	Right side panel assy			
8a	02-4215-01	Receptacle			

* Side trim strips discontinued mid 2011

** Bezel and fitting discontinued 2/8/2012.

C1448, C1848, C2148 Service Parts

Cabinet - D and E Series

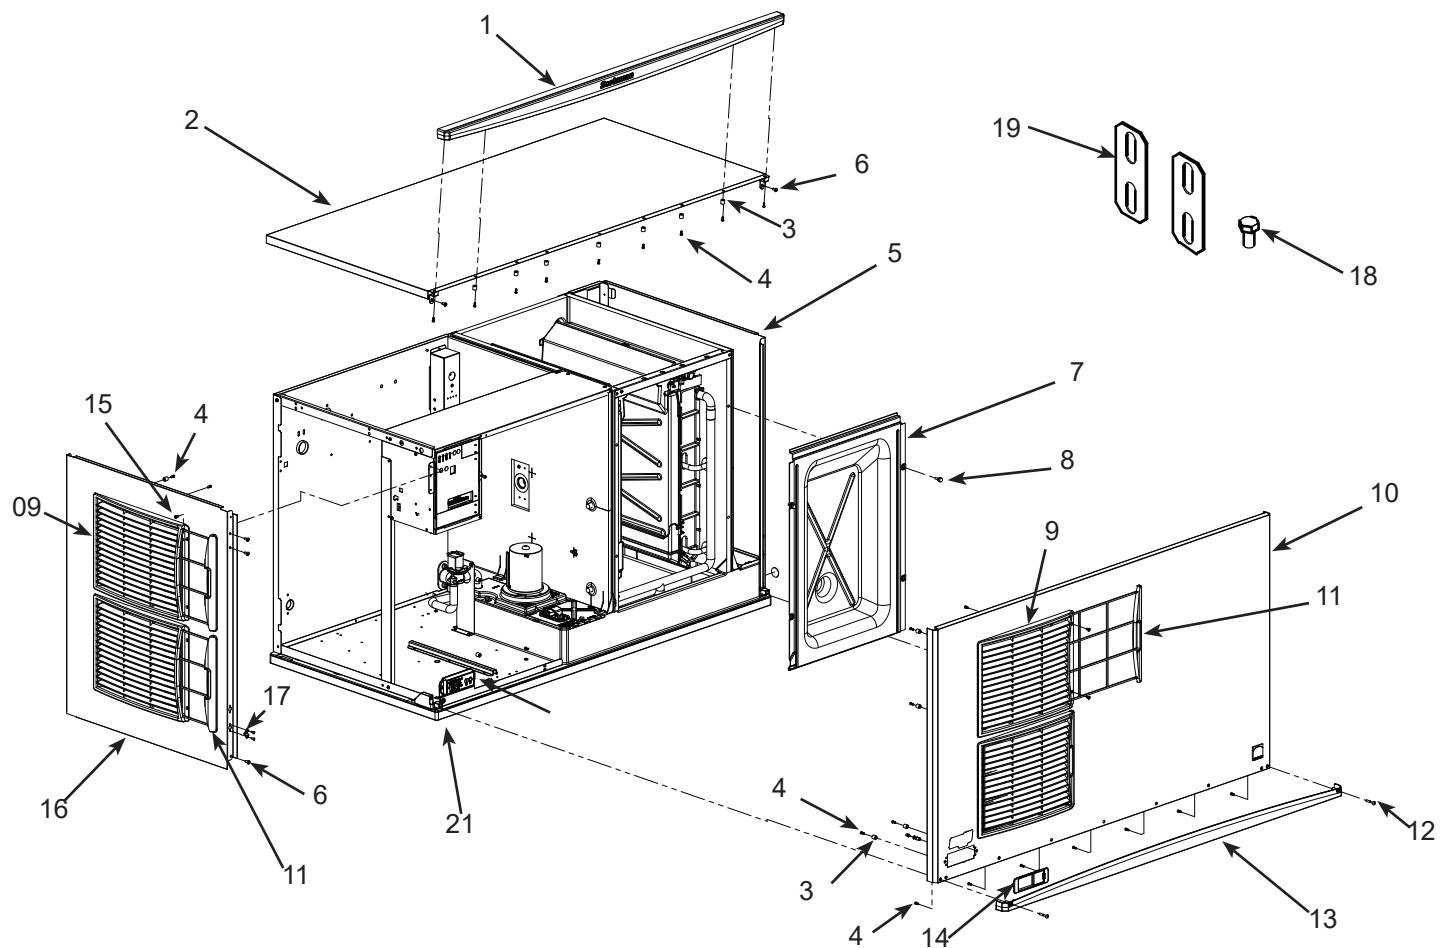


Item Number	Part Number	Description	Item Number	Part Number	Description
1	02-4819-03	Trim strip	14	02-4821-02	Bezel with standard door
2	A40309-023	Top panel	14a	02-4822-02	Bezel with secure door
3	02-4824-01	Spacer	15	03-1419-26	Screw
4	03-3836-02	Screw	16	A40310-028	Left side panel, AC
5	A40311-022	Right side panel		A40310-022	Left side panel WC, RC
6	03-1404-10	Screw	17	03-1733-04	Ball stud Receptacle
7	02-4184-01	Inner front panel	18	03-1405-15	Screw
8	03-0727-05	Thumbscrew	19	A30911-015	Machine straps
9	02-4224-03	Louvers	20	11-0622-21	Light & switch panel D series
10	A40308-030	AC Front panel assembly, includes filters, trim strip, gussets and labels.	21		See page 5 items 29, 29a & 29b
	A40308-031	WC, or RC front panel assembly, includes trim strip, gussets and labels			
11	02-4212-03	Filters			
12	03-1735-03	Screw			
13	02-4820-03	Trim strip bottom			

C1448, C1848, C2148 Service Parts

Interior Parts

WLS guard kit, Part Number
A39989-023
includes items 15, 15a, 27, 28

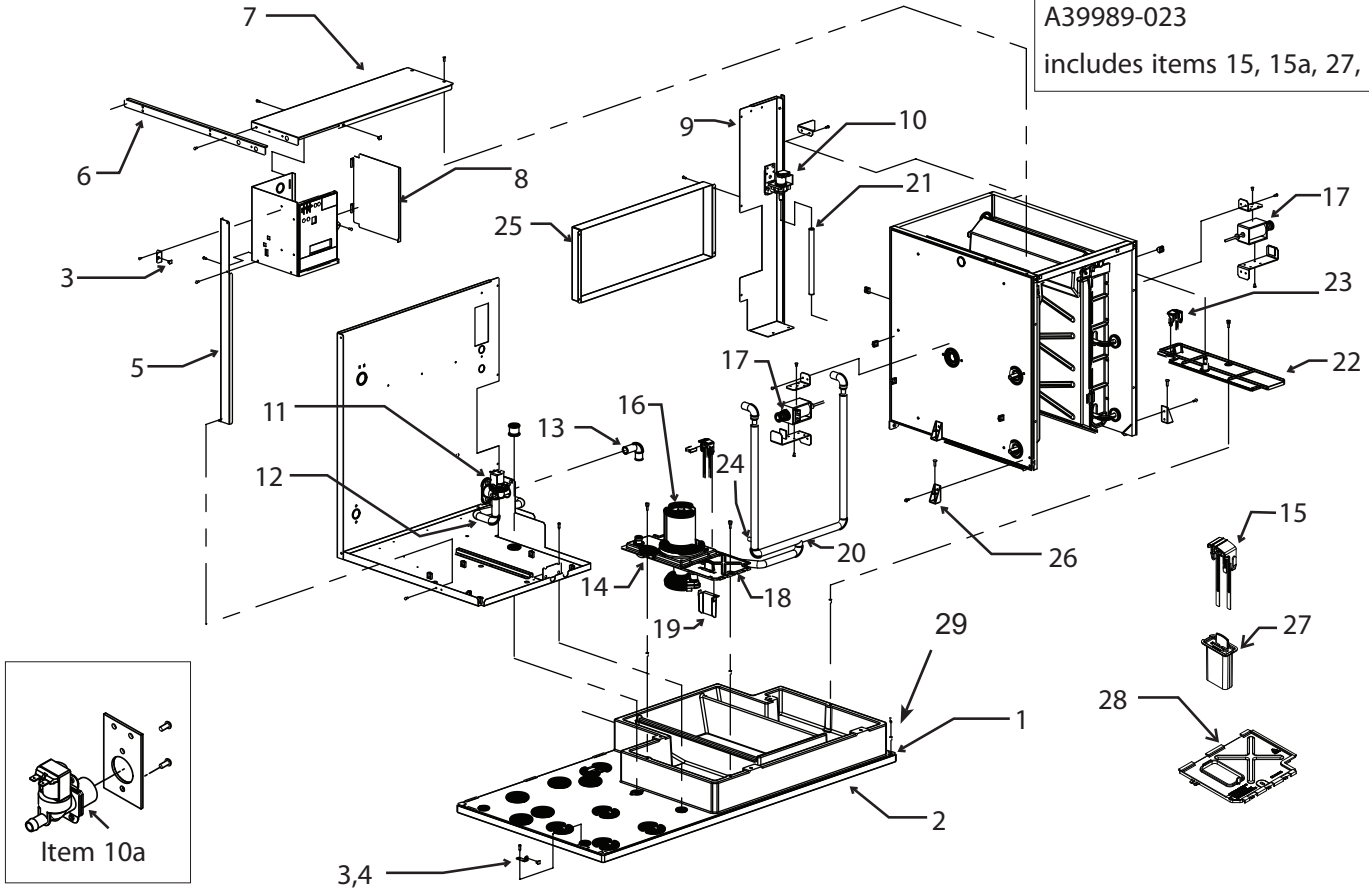


Item Number	Part Number	Description	Item Number	Part Number	Description
1	15-0411-00	Strike - A series only	15a		WLS harness, see page 10
2	no number	Base, insulated	16	12-2920-22	Water pump - 60 Hz
3	03-3804-01	Receptacle		12-2920-26	Water pump - 50 Hz
4	A38732-001	Side panel mount	17	12-3060-22	Harvest assist solenoid
5	A38629-001	Strut	18	02-4178-01	Reservoir cover (prior)
6	A38582-001	Brace	19	02-4332-01	Sensor cover (prior)
7	A39281-001	Control box top	20	02-4182-01	Pump hose
8	A38537-001	Control box side	21	13-0674-02	Fill hose order by ft (18")
9	A38680-001	Right back panel		15-0821-01	Fill hose, -6 CE models
10	12-3124-02	Inlet water sol vlv, 230 volt	22	02-4175-01	Rt side res cover
	12-2912-01	Water valve rebuild kit	23	A39030-022	Level sensor, discontinued
10a	11-0568-02	Inlet water sol vlv, CE mod	24	11-0572-21	Temp probe assy
11	11-0564-02	Purge valve, 230 volt	25	A38681-001	Chase cover
12	A38862-002	Drain tube	26	02-4152-01	Gusset
13	A38862-001	Drain hose	27	02-4646-01	WLS guard, use/w item 28
14	02-4177-01	Water pump bracket	28	02-4649-01	Sump cover, use/w item 27
15	A39030-021	Water level sensor	29	02-4823-21	*Panel mount kit, left
			29a	02-4823-22	*Panel mount kit, right

*Includes both screw receptacles

C1448, C1848, C2148 Service Parts

Evaporator Compartment

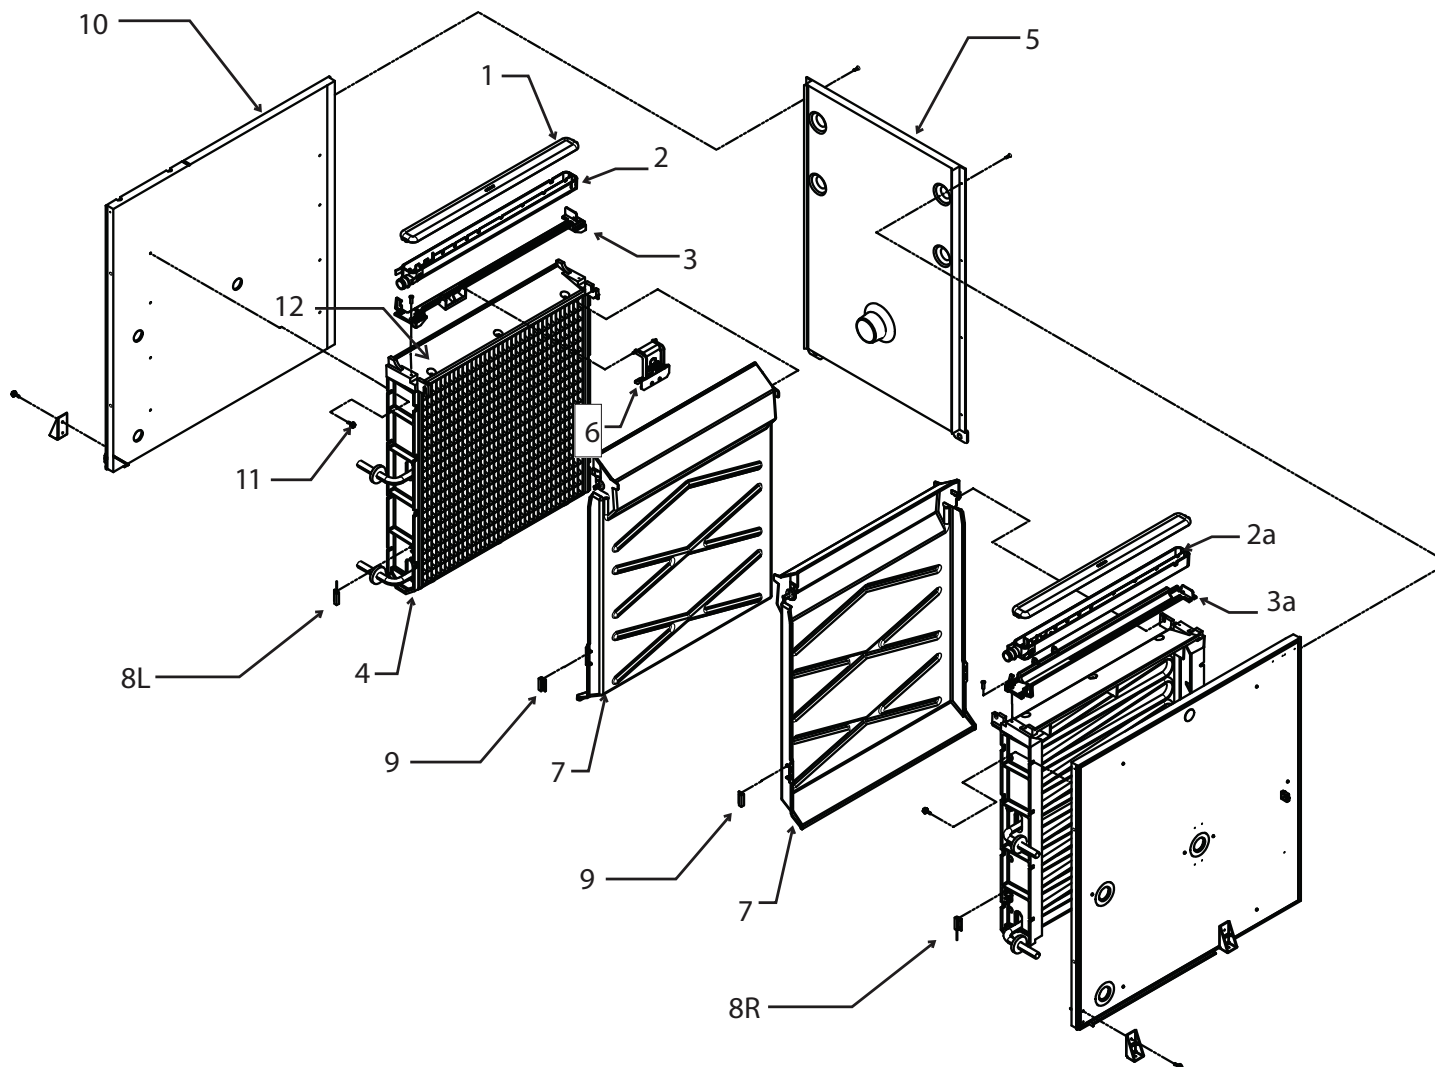

Item Number	Part Number	Description
1	02-4065-01	Water distributor cover
2	02-4064-01	Water distributor, left
2a	02-4064-02	Water distributor, right
3	02-4205-01	Mounting bracket, left
3a	02-4205-02	Mounting bracket, right
4	see table	Evaporator

6	A39031-021	Ice thickness sensor
7	02-4611-21	Curtain
8L	11-0563-06	Curtain switch, left
8R	11-0563-03	Curtain switch, right
9	11-0563-02	Curtain switch magnet*
10	13-0943-01	Gasket tape
11	03-3868-01	Screw
12	02-4156-21	Spillway replacement kit


* Magnet included in replacement curtain 02-4611-21

	small cube	medium cube
Right	A38628-023	A38628-024
Left	A38628-021	A38628-022

5 A38677-001 Back wall

C1448, C1848, C2148 Service Parts


Air Cooled Refrigeration System

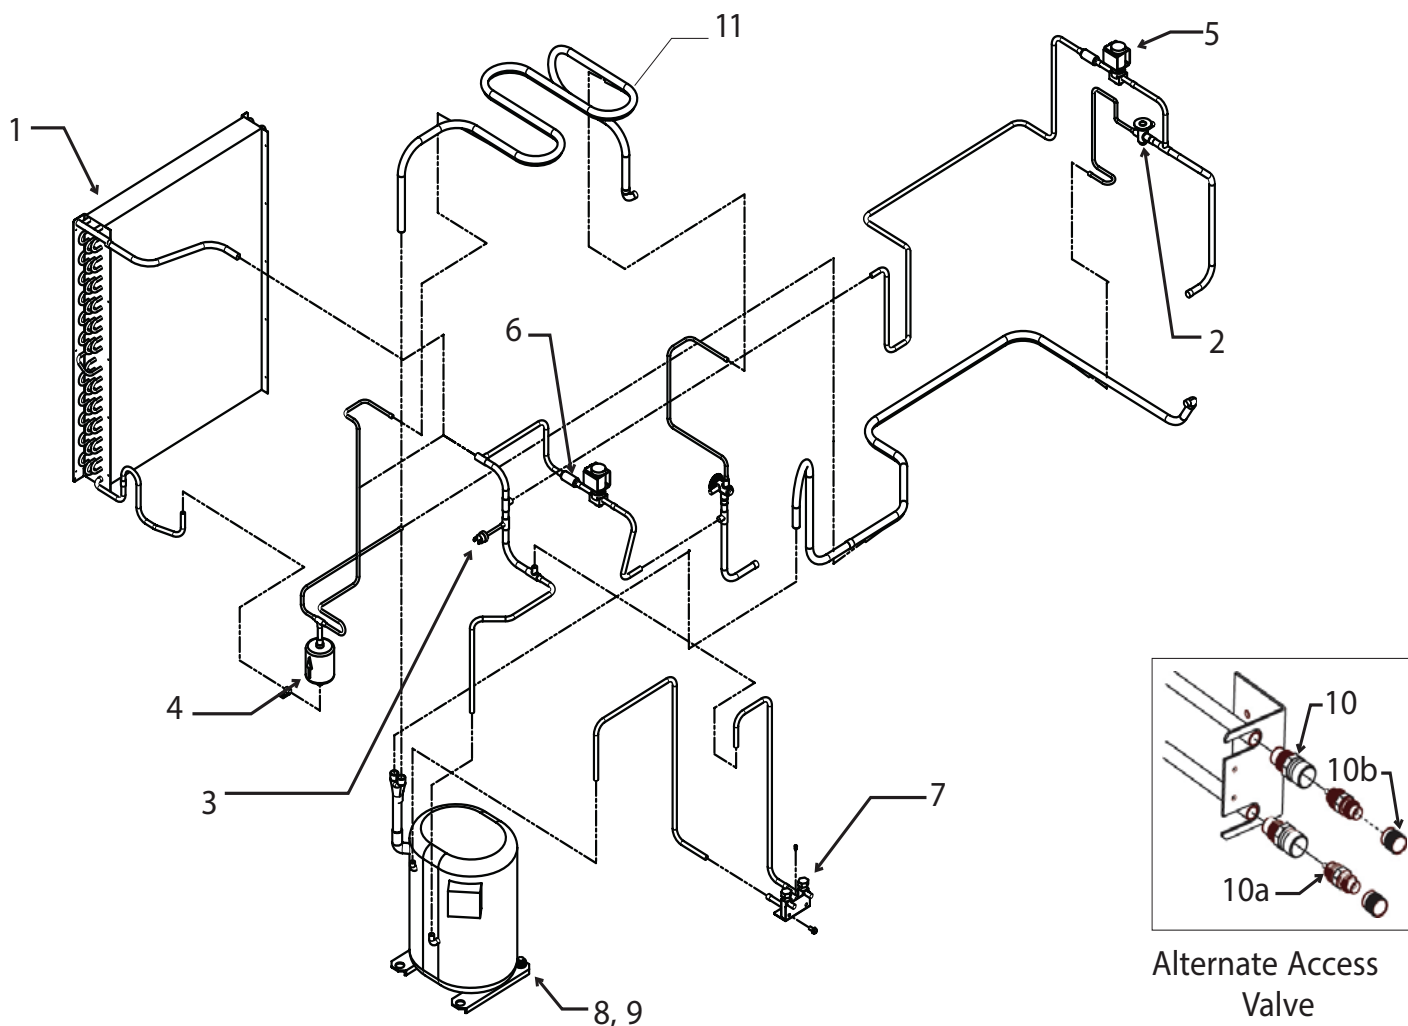

Item Number	Part Number	Description	Alternate Access Valve, use began 4/08		
1	18-8892-01	Condenser, AC	10	16-1137-01	Valve body
2	16-1130-01	TXV	10a	16-1139-01	Core
	19-0599-06	Insulation Danfoss TXV	10b	16-1140-01	Cap
3	11-0566-22	Fan cycle pressure sw.	11	A38736-001	Left suction line heat ex
4	02-3319-02	Dryer			
5	11-0493-01	Hot gas valve, 230 volt			
	12-2719-22	230 volt coil			
	12-2733-30	HGV rebuild kit			
6	16-1063-01	Strainer			
7	16-0832-20	Access valve			
	16-0832-03	Port cap			
	16-0832-02	Stem cap			
8	see page 10	Compressors			
9	see page 10	Compressor mounting hdw			

C1448, C1848, C2148 Service Parts


Air Cooled Fan Area

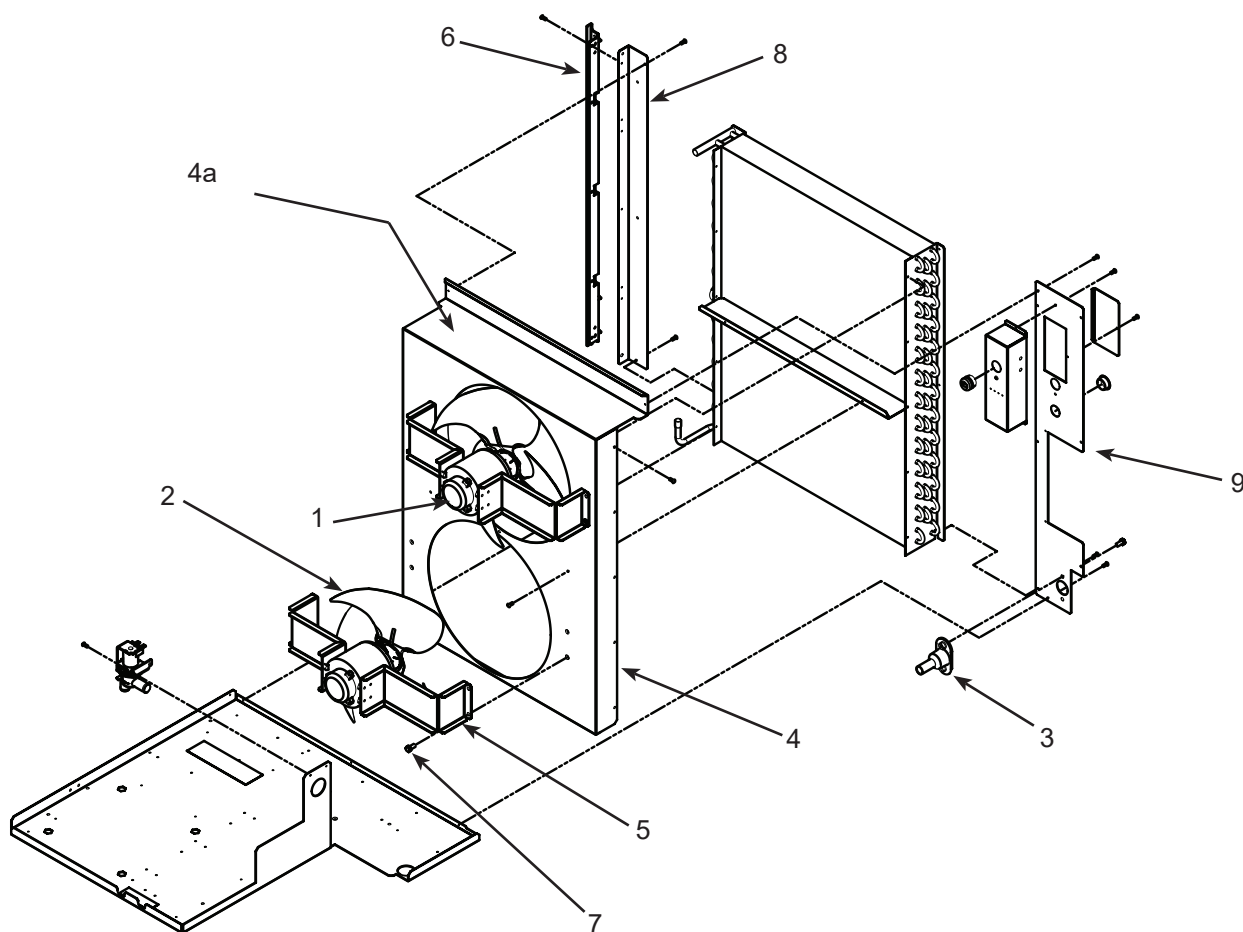

Item Number	Part Number	Description
1	18-8927-01	Fan motor All but C1848 E
1a	18-8927-02	C1848 E Fan motor
2	18-8882-01	Fan blade
3	02-3692-21	Drain adapter - also for WC and RC
4	A38682-001	Fan shroud - A Series
	A39630-001	Fan shroud - B- E Series
4a	A39631-001	Fan shroud top - B - E series only
5	A38554-001	Fan motor bracket
6	02-4067-04	Side panel support - AC
7	03-1645-01	Screw
8	A38741-001	AC bracket - A Series
	A39590-001	AC bracket - B and E Series
9	A38797-001	Back panel, AC only

C1448, C1848, C2148 Service Parts


Water Cooled Refrigeration

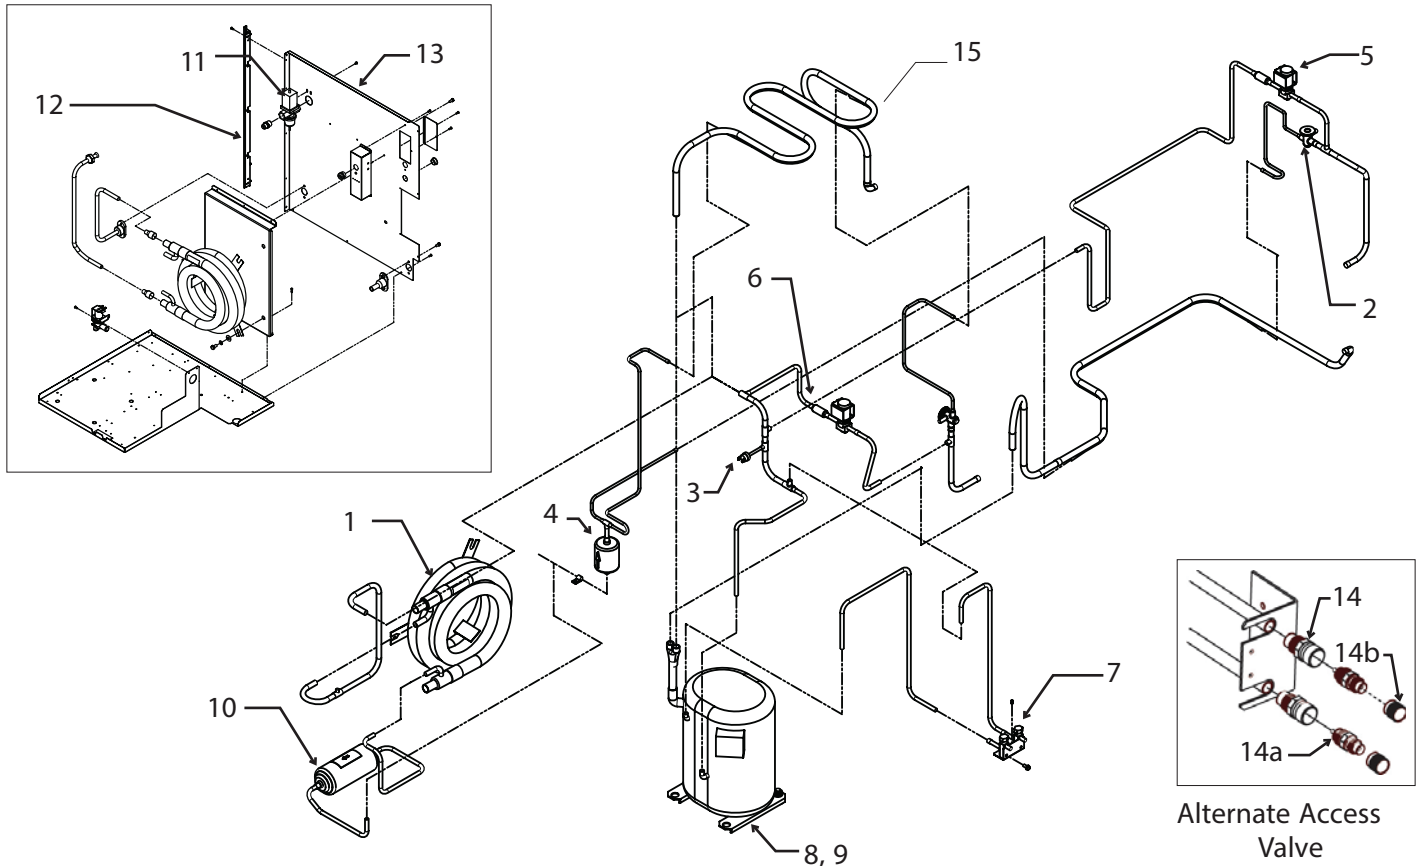

Item	Part				
Number	Number	Description			
			10	02-2628-02	Receiver
1	18-8865-01	Condenser, WC C1448. C1848	11	11-0608-21	Water regulating valve, C1448W,
	18-8931-21	Condenser, WC C2148	C1848W		
2	16-1130-01	TXV		11-0478-02	Water regulating valve C2148W
	19-0599-06	Insulation for TXV	12	02-4067-03	Side support
3	11-0501-21	High pressure sw.	13	A38606-001	Back panel, WC - A series
4	02-3319-02	Dryer		A39574-001	Back panel, WC - B - D series
5	11-0493-01	Hot gas valve, 230 volt		A40629-001	Back panel, WC - E series
	12-2719-22	230 volt coil		A40654-001	Back cover, WC - E series
	12-2733-30	HGV rebuild kit	Prior Access Valve, up to 4/08		
6	16-1063-01	Strainer		16-0832-20	Access valve
7	16-1137-01	Valve body		16-0832-03	Port cap
7a	16-1139-01	Core		16-0832-02	Stem cap
7b	16-1140-01	Cap	15	A38736-001	Left suction line heat ex
8	see page 10	Compressors	16	16-1154-01	Drain Adapter
9	see page 10	Compressor mounting hdw	16a	A39550-001	Brkt for #16

C1448, C1848, C2148 Service Parts

Remote Refrigeration System

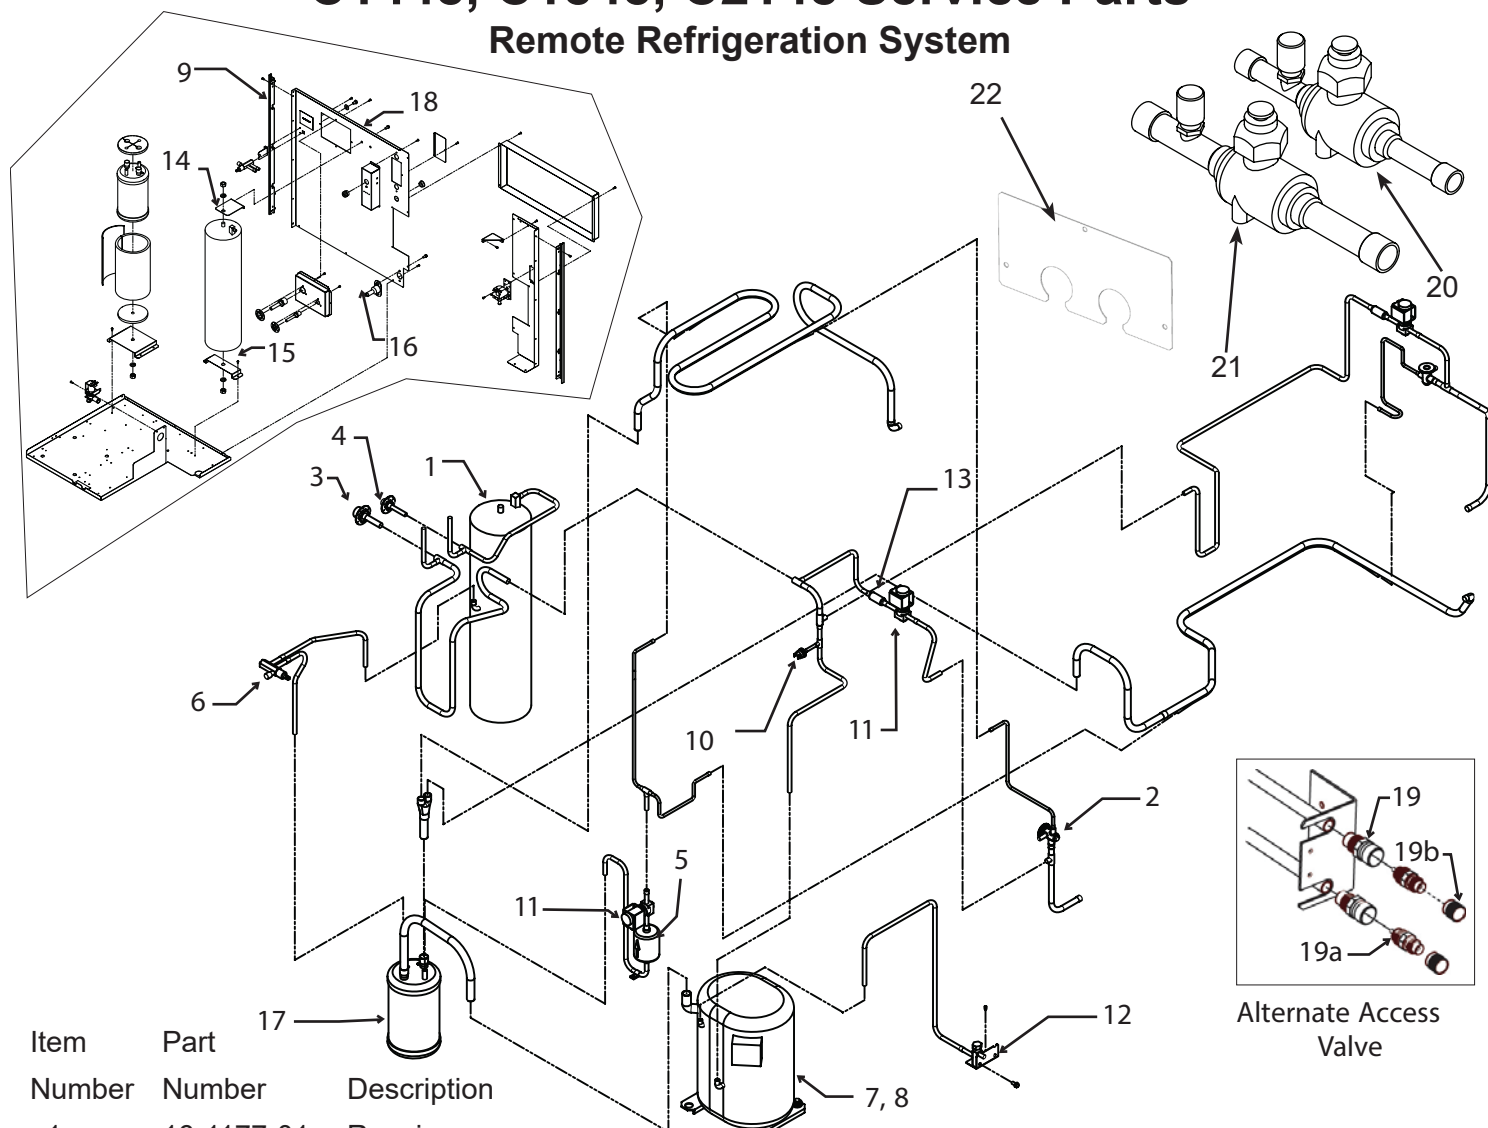


Item Number	Part Number	Description
1	16-1177-01	Receiver
2	16-1130-01	TXV
	19-0599-06	insulation Danfoss TXV
3	16-0850-01	Discharge quick connect
4	16-0850-03	Liquid quick connect
5	02-3319-02	Drier
6	16-1030-01	Liquid line access valve
7	see page 10	Compressors
8	see page 10	Compressor mounting hdw
8a	see page 10	Crankcase heater
9	02-4067-03	Side panel support,
10	11-0501-22	High pressure cut out
11	11-0493-01	Liquid line valve or HGV, 230 v
12	16-1137-01	Valve body
	16-1139-01	Core
	16-1140-01	Cap
13	16-1063-01	Strainer
14	A37211-001	Top receiver bracket
15	A37212-001	Bottom receiver bracket
16	02-3692-21	Drain adapter
17	16-1122-21	Accumulator, kit w/insul
18	A38679-001	Back panel, rem - A series
	A39574-001	Back panel, rem - B series
	A40629-001	Back panel, rem - E series
*Prior Access Valve, up to 4/08		
19*	16-0832-20	Access valve
19a*	16-0832-03	Port cap
19b*	16-0832-02	Stem cap
20	16-1208-01	3/8 Isolation valve - E series
21	16-1208-02	1/2 Isolation valve - E series
21a	A40507-001	Isolation valve bracket - E series
22	A40508-001	Fittings cover rem - E series

Alternate Access Valve

C1448, C1848, C2148 Service Parts

Electrical and Control Box, -3, -6, -32

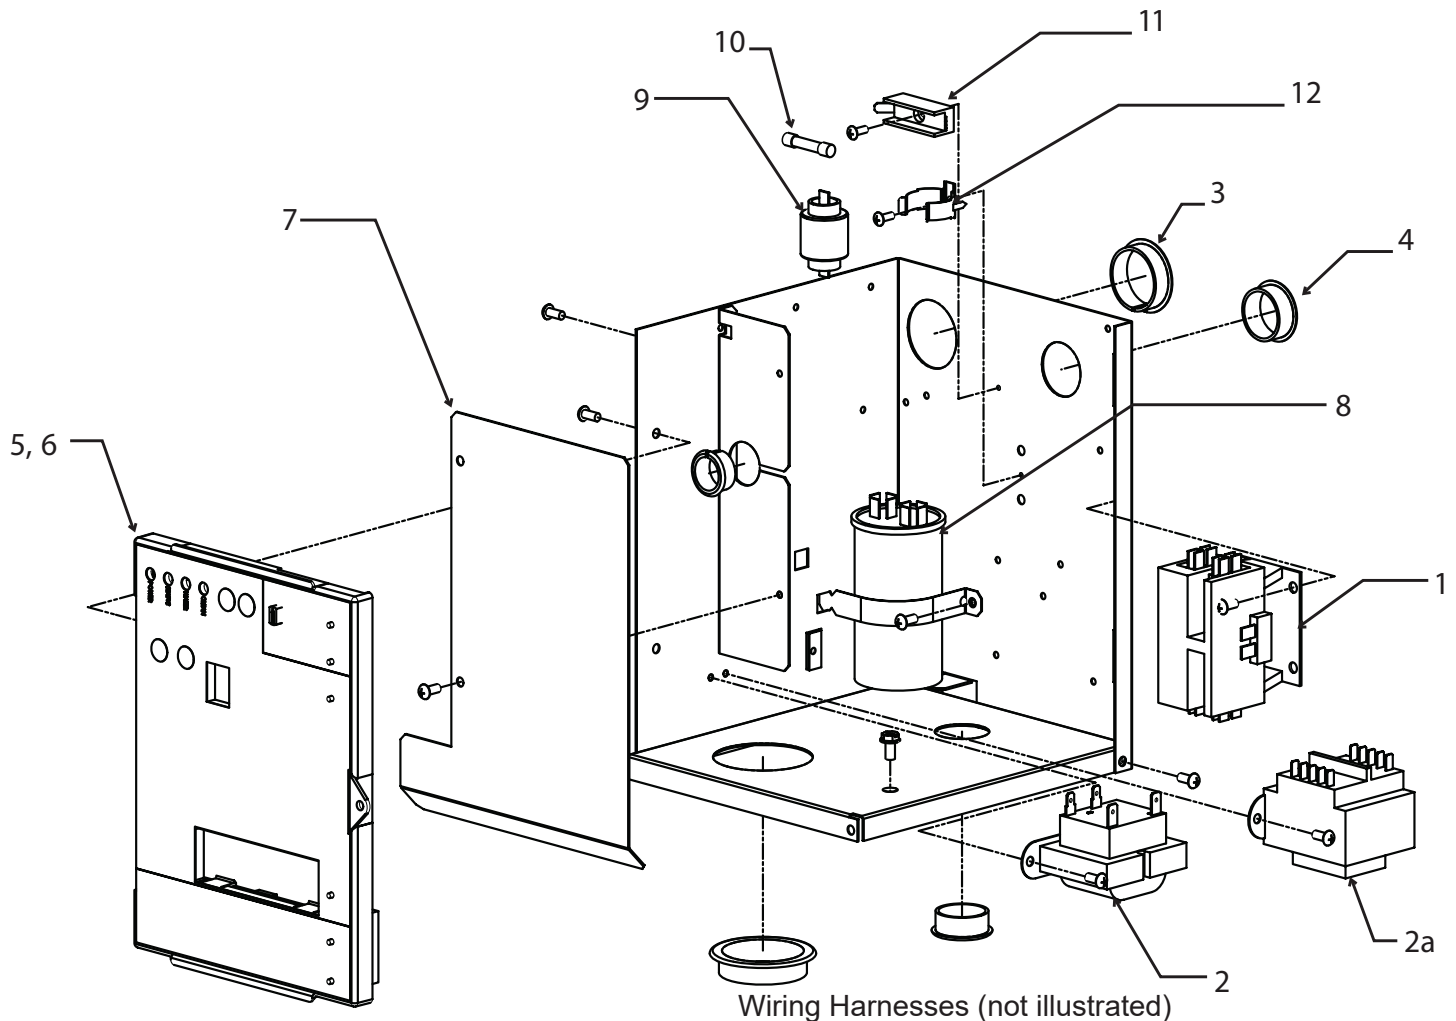

Wiring Harnesses (not illustrated)

Power harness connects to J1 on controller (4 pin)

12-2931-01 Power harness, A & W

12-2931-02 Power harness, Remote

Hi voltage harness has the 8 pin connector

12-2937-01 1448,1848 A-E series Hi voltage harness A & W

12-2938-01 1448,1848 A-E series Hi voltage harness Rem

12-3066-02 1448,1848 A-E series Hi voltage, 50 Hz A & W

12-3067-02 1448, 1848 A-E series Hi voltage, 50 Hz, Rem

12-3067-02 2148 E series Hi voltage, 50 Hz, Rem

12-3140-01 2148 E series Hi voltage harness, Rem

12-2937-01 2148 A-D series Hi voltage harness, A & W

12-2938-01 2148 A-D series Hi voltage harness, Rem

12-2928-01 Water level sensor harness

for the 3 probe sensor. Second sensor discontinued.

11-0622-21 Light & switch panel


12-2949-03 Fan Relay E models only

12-2949-02 Relay Base E models only

Item Number	Part Number	Description
1	12-2469-02	Contactor, 230, single ph
	12-2533-02	Contactor, three phase
2	12-2924-02	Transformer, 230 volt
2a	12-2639-01	Transformer, 50 Hz
3	12-1213-11	Snap bushing
4	12-1213-15	Snap bushing
5	11-0621-21	Service controller
6	02-4076-01	Control box door
	02-4189-01	Overlay label
7	A39216-001	Barrier
8	see next page	Run capacitor
9	see next page	PTCR -
10	12-2686-01	Fuse, 50 Hz only
11	12-2687-01	Fuse holder
12	18-8840-02	Bracket

C1448, C1848, C2148 Service Parts

Electrical & Control Box, 400 volt, 50 Hz. 3 phase w/neutral (-63)

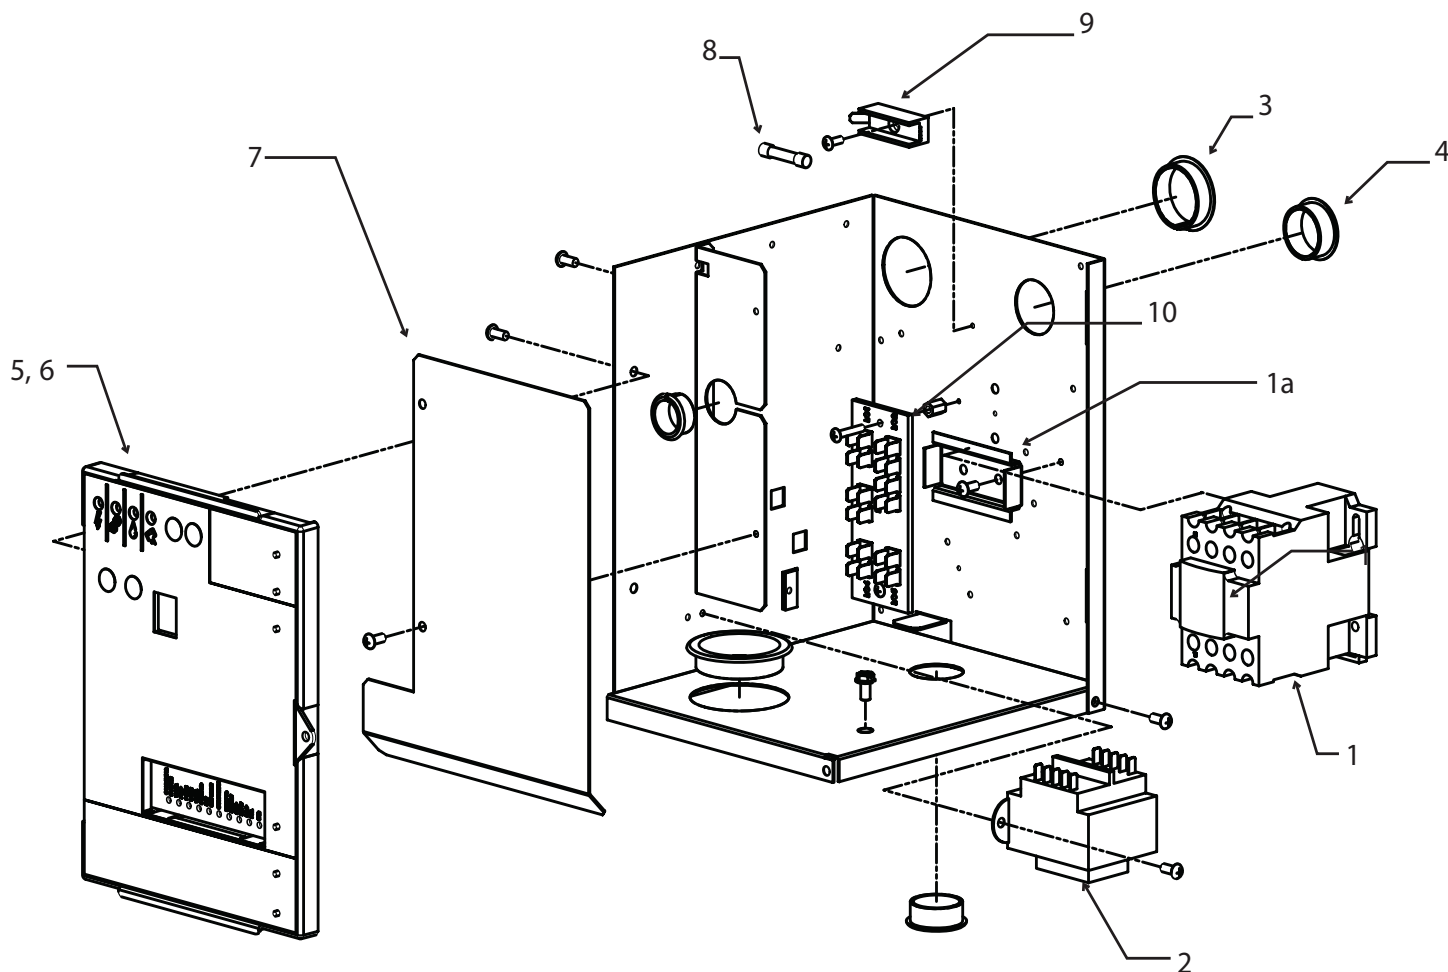

Item Number	Part Number	Description
1	12-3010-03	Contactor, 400 v 3 ph.
1a	A39511-001	Bracket
2	12-2639-01	Transformer, 50 Hz
3	12-1213-11	Snap bushing
4	12-1213-15	Snap bushing
5	11-0621-21	Service controller, fits all Prodigy cubers
6	02-4076-01	Control box door
	02-4189-01	Overlay label
7	A39216-001	Barrier
8	12-2686-01	Fuse, 50 Hz only
9	12-2687-01	Fuse holder
10	A25981-001	Terminal board

Wiring Harnesses (not illustrated)

11	12-3066-02	Hi voltage, 50 Hz, Rem (with cap) Hi voltage harness has the 8 pin connector
12	12-2928-02	Water level sensor harness
13	11-0622-21	Light & switch panel D, E series

C1448, C1848, C2148 Service Parts

Compressors

Model	Series	Electrical	Compressor	Run Capacitor	PTCR/Relay	Start Capacitor
C1448-32	A-E	208-230/60/1	18-8749-22	18-1902-70	18-8840-01	-
C1448-6	A-E	230/50	18-8749-27	18-1902-70	18-8840-01	-
C1448-3	A-E	208-230/60/3	18-8749-24	-	-	-
C1448-63	A-E	230/380-420/50/3	18-8749-18**	-	-	-
C1848-32-AC	A-D	208-230/60/1	18-8751-23	18-1902-71	18-8840-01	-
C1848-32-AC	E	208-230/60/1	18-8750-22	18-1902-70	18-8840-01	-
C1848-32-WC,RC	A-E	208-230/60/1	18-8751-23	18-1902-71	18-8840-01	-
C1848-6	A-E	230/50	18-8751-27	18-1902-71	18-8840-01	-
C1848-3	A-E	208-230/60/3	18-8751-25	-	-	-
C2148-32 - WC	A-B	208-230/60/1	18-8930-24	18-1902-27	18-8840-01	-
C2148-6 - WC	A-B	230/50	18-8930-26	18-1902-59	18-8840-01	-
C2148-3 - WC	A-B	208-230/60/3	18-8930-25	-	-	-
C2148-32 - RC	A-D	208-230/60/1	18-8923-22	18-1902-27	18-8840-01	-
C2148-6 - RC	A-E	230/50	18-8923-26	18-1902-59	18-8840-01	-
C2148-3 - RC	A-D	208-230/60/3	18-8923-23	-	-	-
C2148-32 - RC	E	208-230/60/1	18-8930-24	18-1902-27	18-1903-62	18-1901-27
C2148-3 - RC	E	208-230/60/3	18-8930-25	-	-	-

Model	Bolt	Washer	Grommet	Sleeve
C1448, C1848	03-1420-20	03-1407-07	18-2300-27	18-2300-26
C2148	03-1405-20	03-1407-07	18-2300-27	18-2300-26


Model	Internal crankcase heater*	External crankcase heater*
C1448R, C1848R, C2148R	18-2308-01	12-3043-03

* Included with replacement compressor (**Except the 18-8749-18 the 18-8749-18 only comes with the compressor.

Compressor shells changed early 2012, crankcase heaters are external after the change. Suction and discharge diameters also changed. Replacement compressors supplied with necessary fittings.

C1448, C1848, C2148 Service Parts

Remote Condenser, ERC311 and ERC611

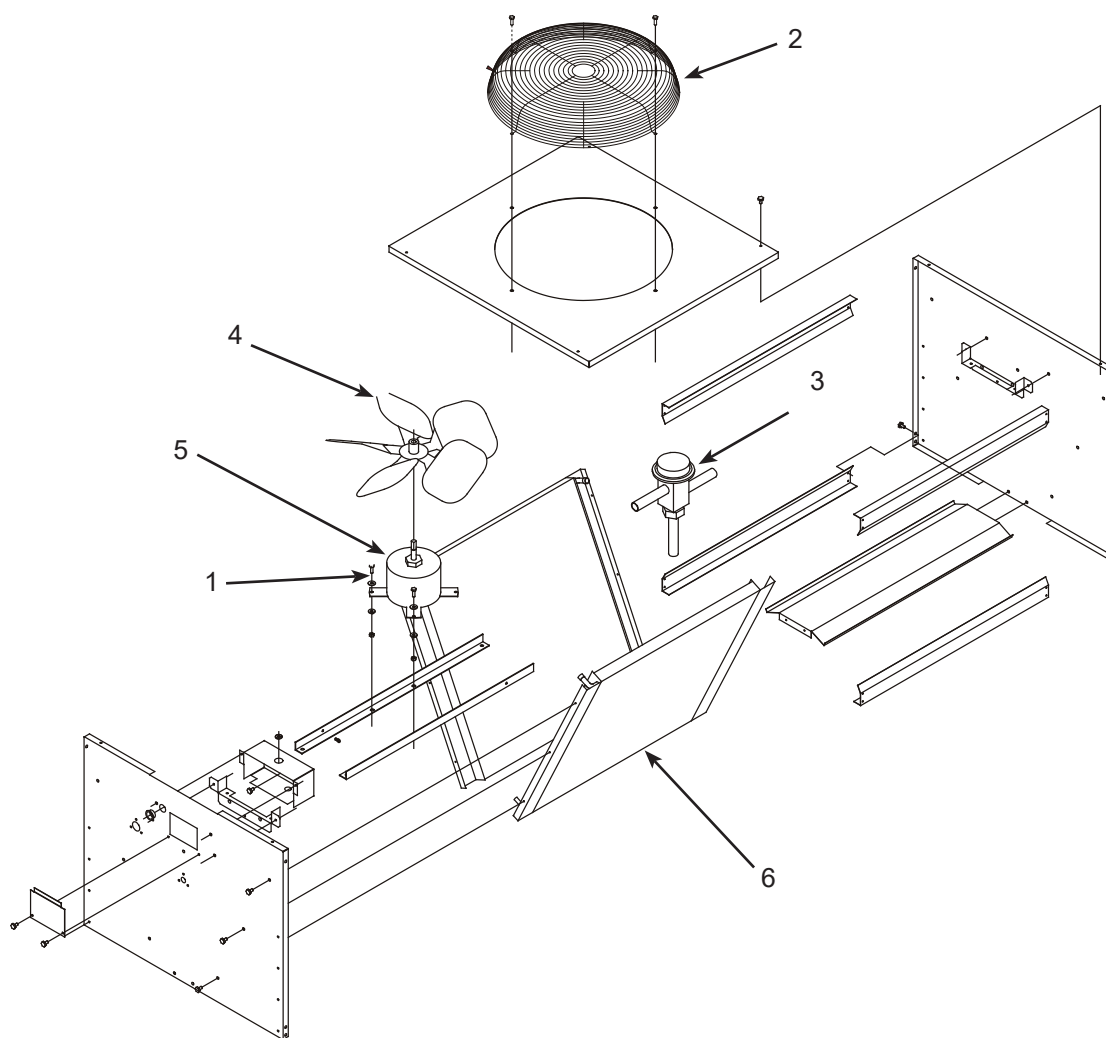

Item Number	Part Number	Description	Not Shown:	
1	03-1405-08	Screw	A37169-001	Leg
2	02-3575-01	Fan guard	A37170-001	Leg brace - ECR311
3	11-0422-22	Headmaster	A37296-001	Leg brace - ERC611
4	18-8816-01	Fan blade - ERC311	03-1645-01	Screw for legs
	18-8820-01	Fan blade - ERC611	16-0850-01	Quick connect, discharge
5	12-2651-01	Fan motor - ERC311	16-0850-03	Quick connect, liquid
	12-2717-01	Fan motor - ERC611	16-1100-08	Quick connect w/ stub for 3/8 inch line set tube
6	18-8827-01	Coil, ERC311	16-1100-09	Quick connect w/ stub for 1/2 inch line set tube
	18-8819-01	Coil, ERC611		

Used on A-D