


Unit Information

3200 Watts 240 Volts

NEMA 6-20 

Grill takes about 10 minutes to warm up.

17" x 9.25" Cooking Surface

Timer requires 2 AAA batteries

WARING COMMERCIAL®

WDG300T


240 volt half flat plates/half ribbed plates with timer

WFG300T


240 volt flat grill with timer

WPG300T

240 volt ribbed grill with timer

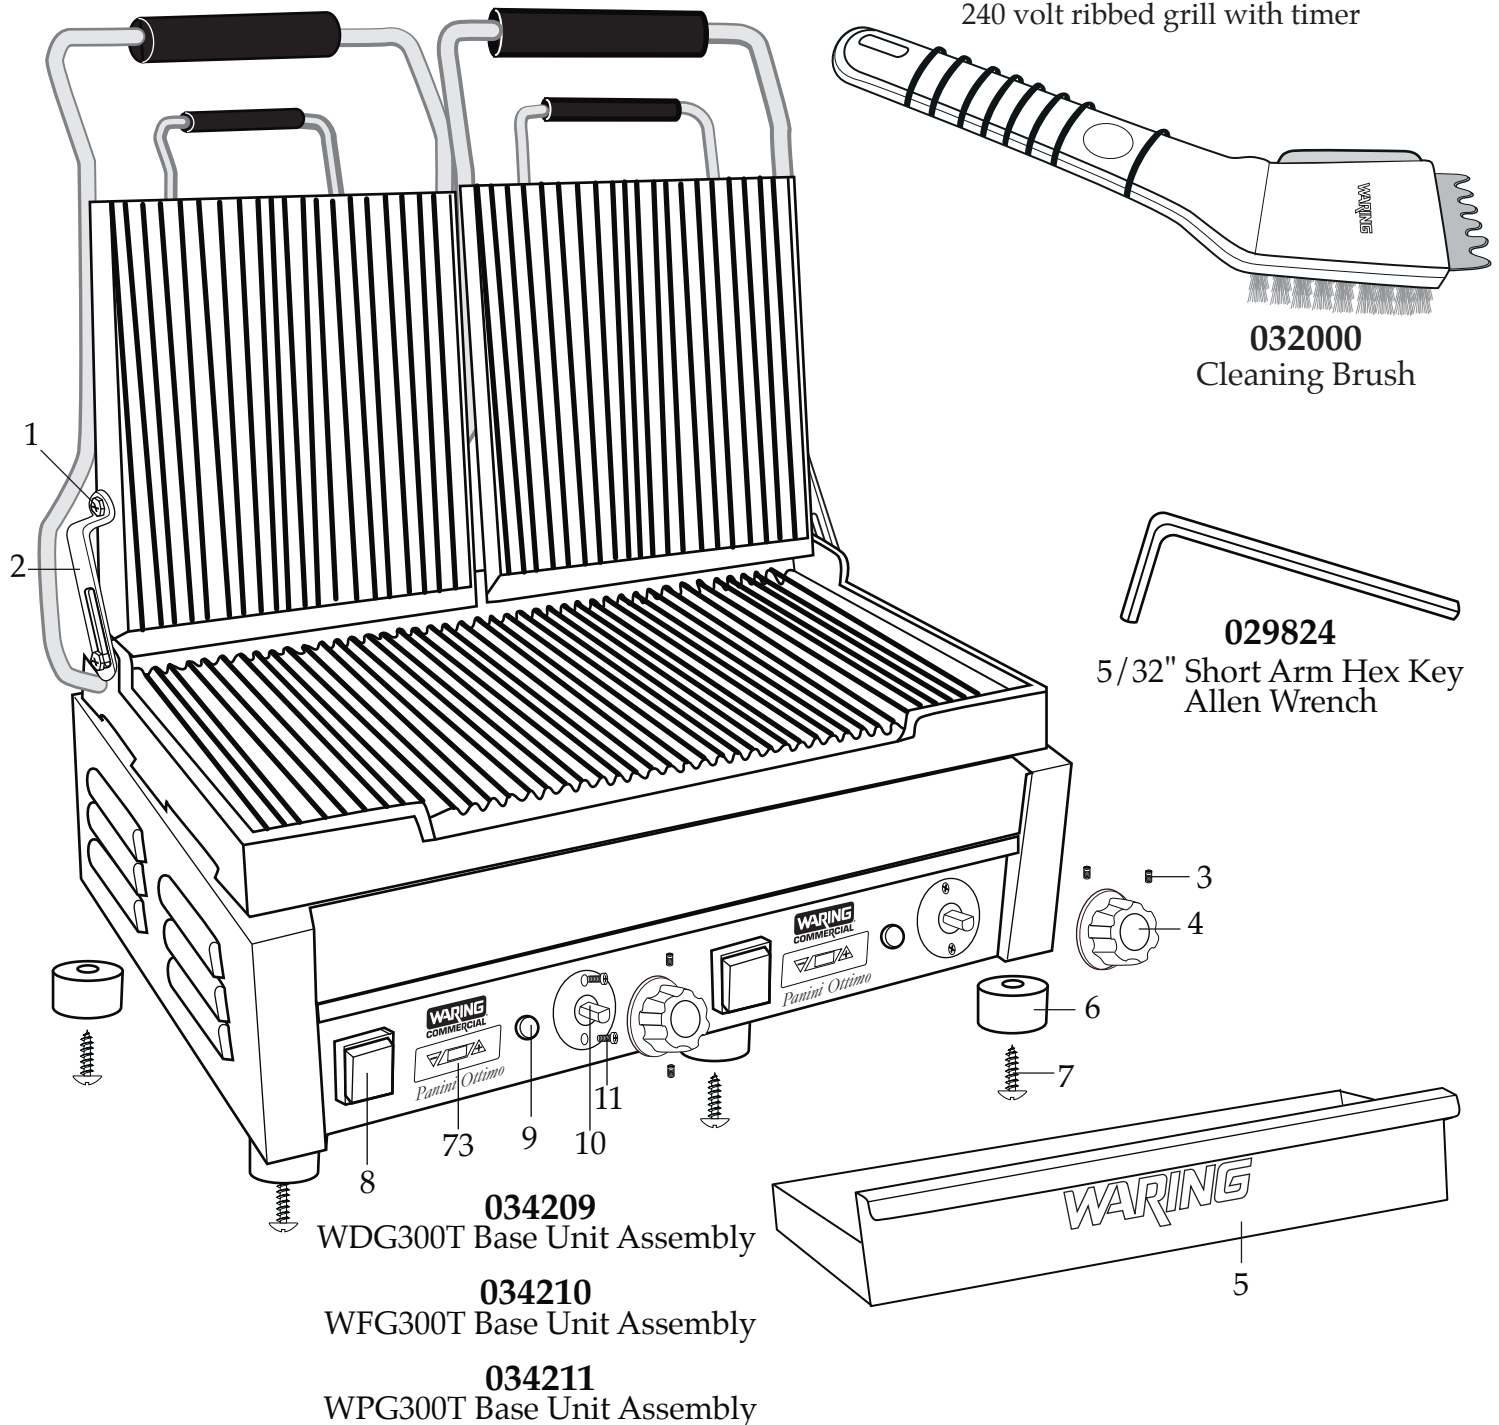

Base Units

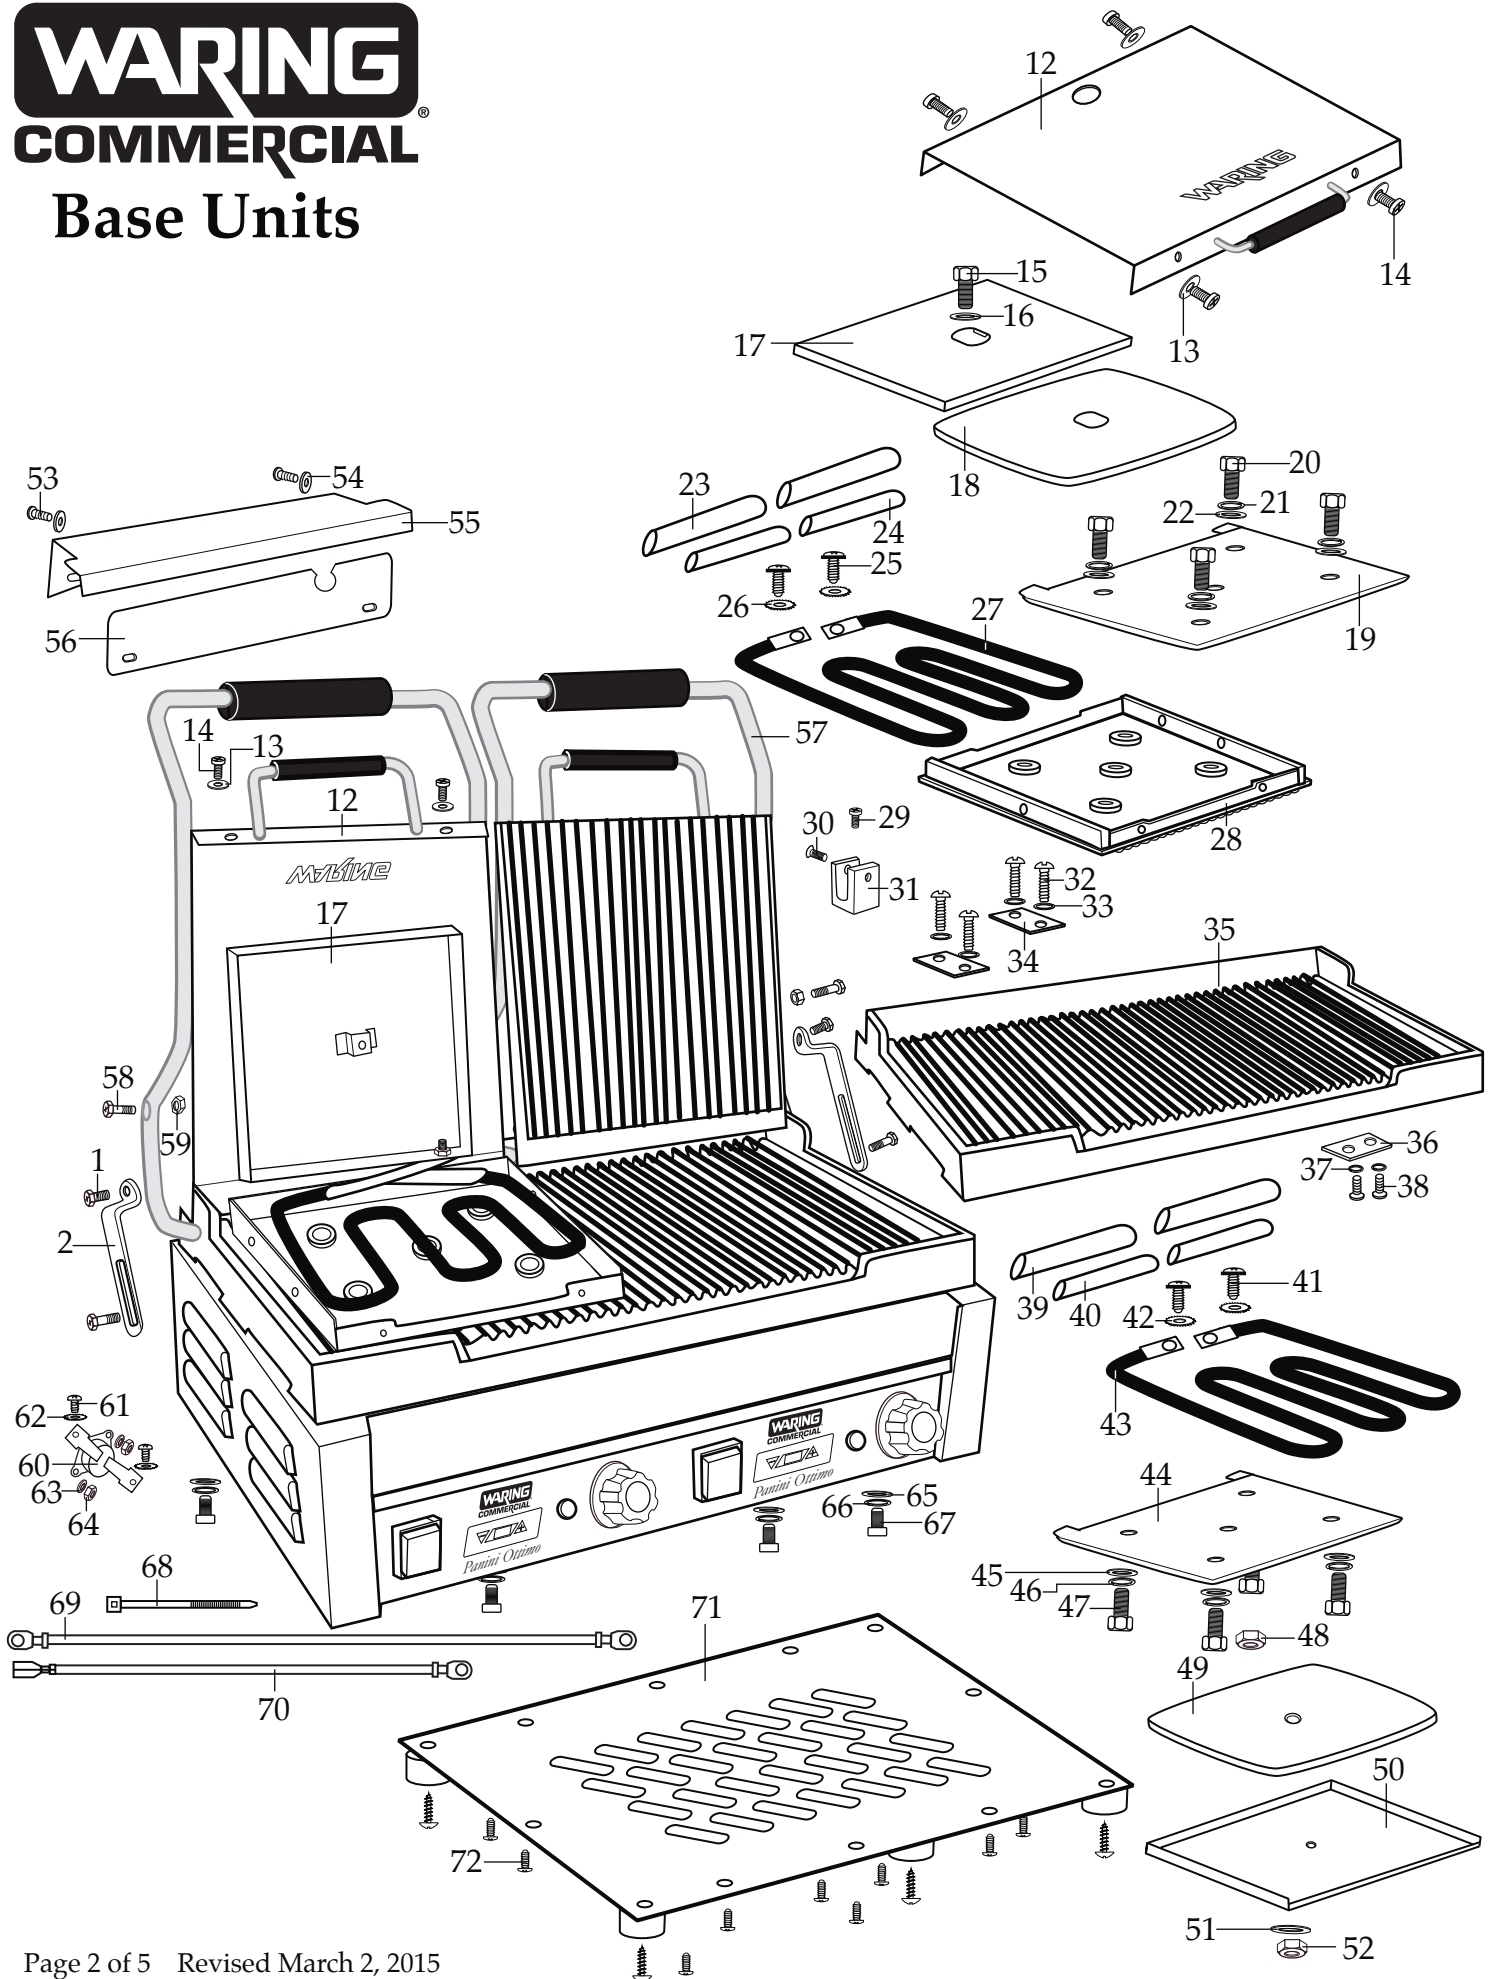

Catalog/Model

WDG300T

WFG300T

WPG300T



Illustration #	Part #	Description
1	028625	Pivot Bracket Screw Set (1 small and 1 large)
2	028624	Pivot Bracket (2 required)
3	028627	Set Screw (4 required)
4	028626	Control Knob (2 required)
5	029504	Drip Tray
6	028622	Foot (2 required)
7	028623	Foot Screw (4 required)
8	029478	On/Off Switch (2 required)
9	030018	Indicator Light (2 required)
10	030013	Thermostat (2 required)
11	029943	Thermostat Screw (4 required)
12	030080	Cover (2 required)
13	029946	Washer (8 required)
14	029947	Screw (8 required)
15	029950	Hex Head Bolt (2 required)
16	029951	Washer (2 required)
17	030057	Top Insulation Plate (2 required)
18	030058	Top Insulation (2 required)
19	030059	Top Element Plate (2 required)
20	029962	Hex Head Bolt (8 required)
21	029963	Spring Washer (8 required)
22	029964	Washer (8 required)
23	029956	Fiber Sleeve (4 required)
24	029957	Plastic Sleeve (4 required)
25	029958	Screw (4 required)
26	029959	Washer (4 required)
27	030060	Top Element (2 required)
28	030061 030062	Top Flat Grill Plate Top Ribbed Plate

Catalog/Model

WDG300T
WFG300T
WPG300T

Waring Factory Service Center
314 Ella T. Grasso Ave.
Torrington, CT 06790
Tele. 1-800-269-6640
Fax 860-496-9017
www.waringcommercialproducts.com



Illustration #	Part #	Description
29	030054	Screw (2 required)
30	030055	Tension Screw (2 required)
31	030056	Tension Bracket (2 required)
32	029992	Screw (8 required)
33	029993	Spring Washer (8 required)
34	030063	Large Handle Bracket (4 required)
35	030064 030065 030066	Bottom Flat Grill Plate Bottom Ribbed Grill Plate Bottom Half Flat & Half Ribbed Grill Plate
36	029973	Thermostat Bracket (2 required)
37	029974	Washer (4 required)
38	029975	Screw (4 required)
39	029956	Fiber Sleeve (4 required)
40	029957	Plastic Sleeve (4 required)
41	029958	Screw (4 required)
42	029959	Washer (4 required)
43	030067	Bottom Element (2 required)
44	030068	Bottom Element Plate (2 required)
45	029964	Washer (8 required)
46	029963	Spring Washer (8 required)
47	029962	Hex Head Bolt (8 required)
48	029980	Nut (2 required)
49	030069	Bottom Insulation (2 required)
50	030070	Bottom Insulation Plate (2 required)
51	029951	Washer (2 required)
52	029980	Nut (2 required)
53	029985	Screw (4 required)
54	029986	Washer (4 required)
55	030071	Rear Cover with Tension Cover (2 required)

Catalog/Model

WDG300T
WFG300T
WPG300T

Waring Factory Service Center
314 Ella T. Grasso Ave.
Torrington, CT 06790
Tele. 1-800-269-6640
Fax 860-496-9017
www.waringcommercialproducts.com

Illustration #	Part #	Description
56	030072	Rear Cover Plate with Tension Hole (2 required)
57	030073	Large Handle (2 required)
58	029990	Hex Head Screw (4 required)
59	029991	Nut (4 required)
60	030074	Thermal Cut-off (2 required)
61	030075	Screw (4 required)
62	030076	Lock Washer (4 required)
63	029997	Washer (4 required)
64	029998	Nut (4 required)
65	029999	Washer (4 required)
66	030000	Spring Washer (4 required)
67	030001	Bolt (4 required)
68	013731	Wire Tie (11 required)
69	030077	20" Red Lead
70	030078	17" Red Lead
71	030079	Bottom Housing Plate
72	030006	Screw (8 required)
73	034202	Timer ONLY (2 required 2AAA batteries needed for each timer)

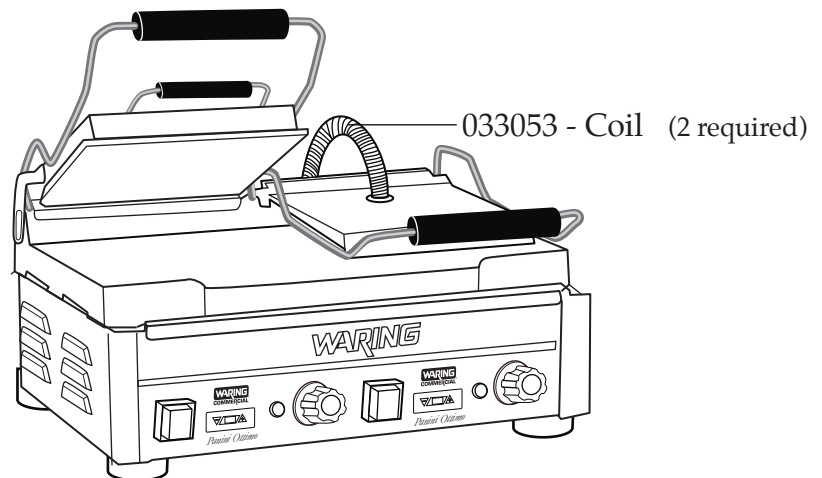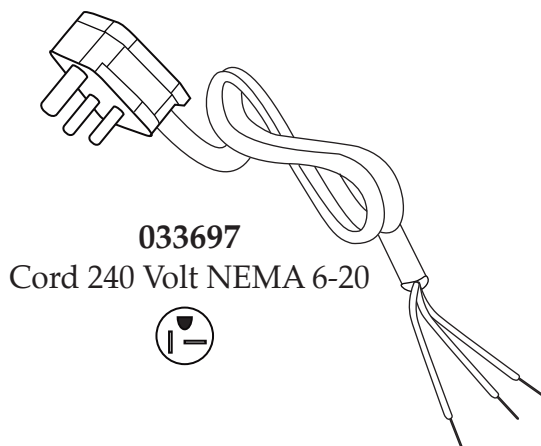

* Certified replacement of the cord set can only be performed by an Authorized Service Center or the Waring Factory Service Center.