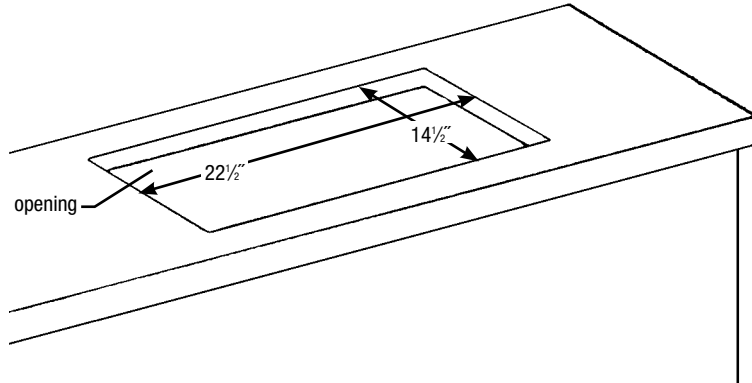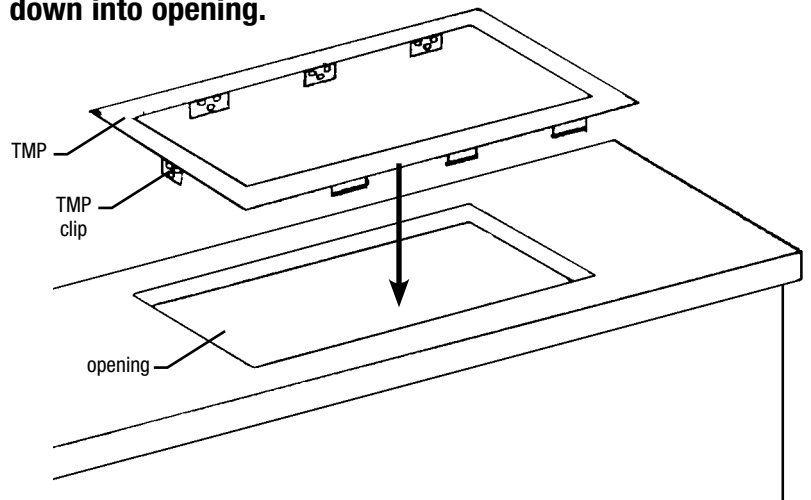# Top Mounting Plate

ASSEMBLY INSTRUCTIONS

CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING
CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.**
YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

Step 1 - Cut out 14½″ x 22½″ opening in countertop.

14½″

22½″

opening

Step 2 - Install top mounting plate (TMP) clips down into opening.

TMP

TMP clip

opening

EG10052   Revised 09/23

Step 3 - Fasten TMP into place.
Insert screws through clips, and tighten screws into plywood.

TMP
formica top
plywood
screw
clip
(underside view)
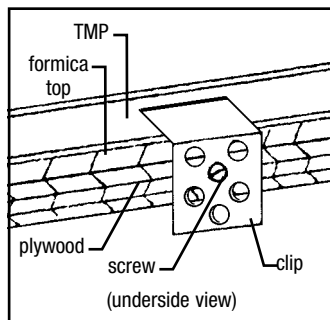
Step 4 - Apply a bead of silicone rubber where TMP edge meets formica top.
• With clean cloth, wipe off excess silicone before it cures.
• Silicone can be purchased at a local hardware store.
• Silicone must be approved for use in food zone.

TMP

SILICONE RUBBER
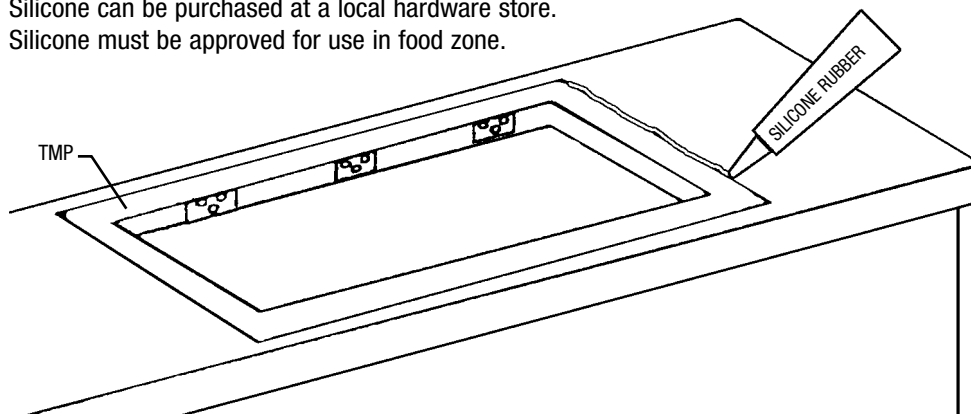
Step 5 - Mount 1220 unit into TMP according to instructions.

(End)