

# CENTERLINE™ BLAST CHILLER BASIC OPERATING INSTRUCTIONS


**1**



Hold down the **"START"** button for 3 seconds or until **"SELECT CYCLE"** appears on screen.


*Note: If unit is in Defrost, wait till defrost is finished*

**2**

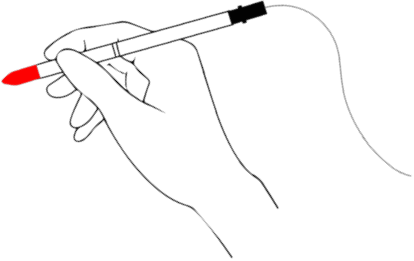


If this chill cycle is by temperature, you **MUST** insert probe into product.

**3**




Ensure door is closed. Press the **"CHILL"** button to toggle between the **clock icon** (by time) or **probe icon** (by temp).

**4**




To modify the temperature or time, use **arrows** to increase or decrease.

**5**




Press the **"MODE"** button to toggle between **"SOFT"** or **"HARD"** chill mode.

**6**

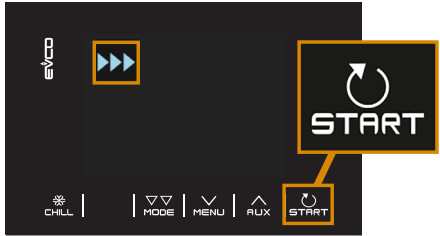

Hold down the **"START"** button to begin the chill cycle. **Blue flashing triangles** will display indicating the cycle is in progress.

NOTE: When the green icon appears, it indicates the cycle is complete 

## CARE & MAINTENANCE

- Sanitize probe after each use.
- Clean cabinet exterior/interior using only non-abrasive, non-chlorinated cleansers.
- For service contact Traulsen at (800) 825-8220.

For more information, please visit:  
[www.centerlinefoodequipment.com](http://www.centerlinefoodequipment.com)

