


DKS-3002

Calibration Instructions

Digital Portioning Scales


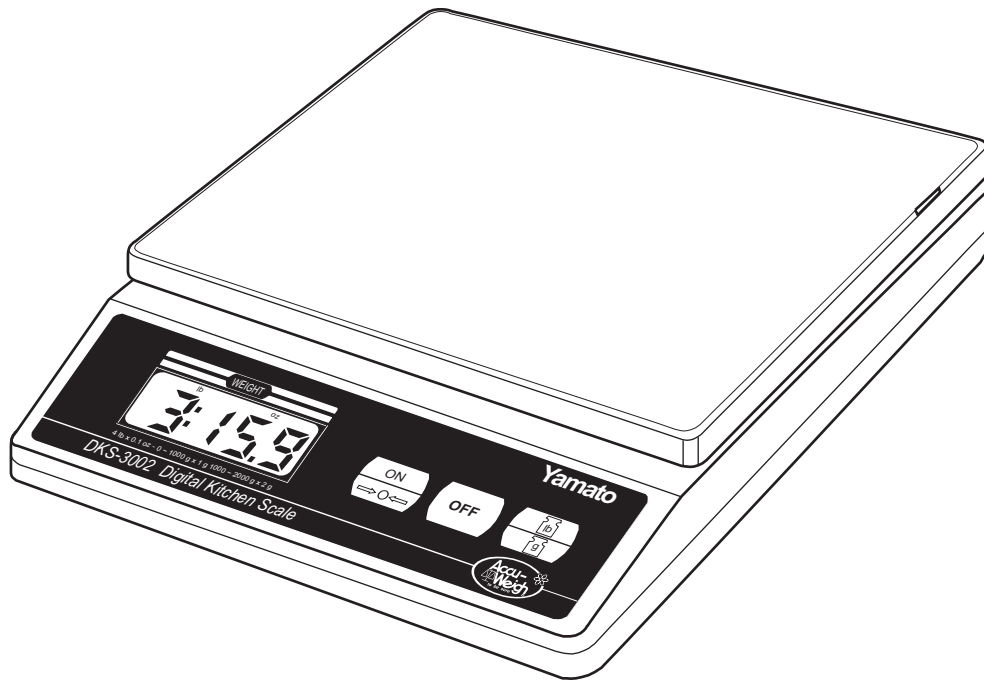



Yamato
www.yamatocorp.com

YAMATO CORPORATION
1775 S. Murray Blvd.
Colorado Springs, CO 80916 USA
Tel (719) 591-1500 Fax (719) 591-1045

YAMATO TECH CORPORATION
#112-19425 Langley By-Pass
Surrey, B.C. V3S 6K1 Canada
Tel (604) 533-2338 Fax (604) 533-0827

Calibration

1. Clear the scale platform. Press the  key while pressing the  key. The scale will display all segments of the LCD.

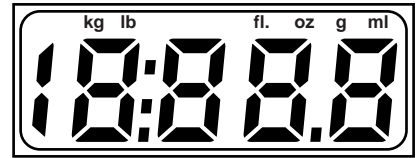

2. Release both keys. The display will show counts at zero.





3. Press the  key. The display will show "0".




4. Place 2 kg, 4.41 lb or 50.5 oz on the scale platform. The display will show full scale counts.



5. Press and hold the  key, then press and hold the  key. The display will read "CAL".



6. Release the  key and press it two more times. The display will flash "CAL", read "8888" and then show 2.000 kg or 4 lb 6.5 oz. If any other value is displayed, repeat the calibration process.



7. The scale is ready for use.

