


# CONNECTING OPTIONAL THERMOSTATIC MIXING VALVE TO AN ADVANCE TABCO PEDAL/KNEE VALVE

These instructions are for connecting to an Advance Tabco Foot Valve: K-103 or 7-PS-39 or Knee Valve K-104 or 7-PS-32 (Purchased separately or may be included with certain Advance Tabco Sinks).

Advance Tabco offers optional Mixing Valve Model K-425 as shown below. Instructions are similar if a Thermostatic Mixing Valve from another source is used.



**Important note:** Insert a 3/8" Brass Plug Fitting (Not included) into the bottom right inlet of the Valve. This inlet will **NOT** be used when using a K-425 thermostatic Mixing Valve.

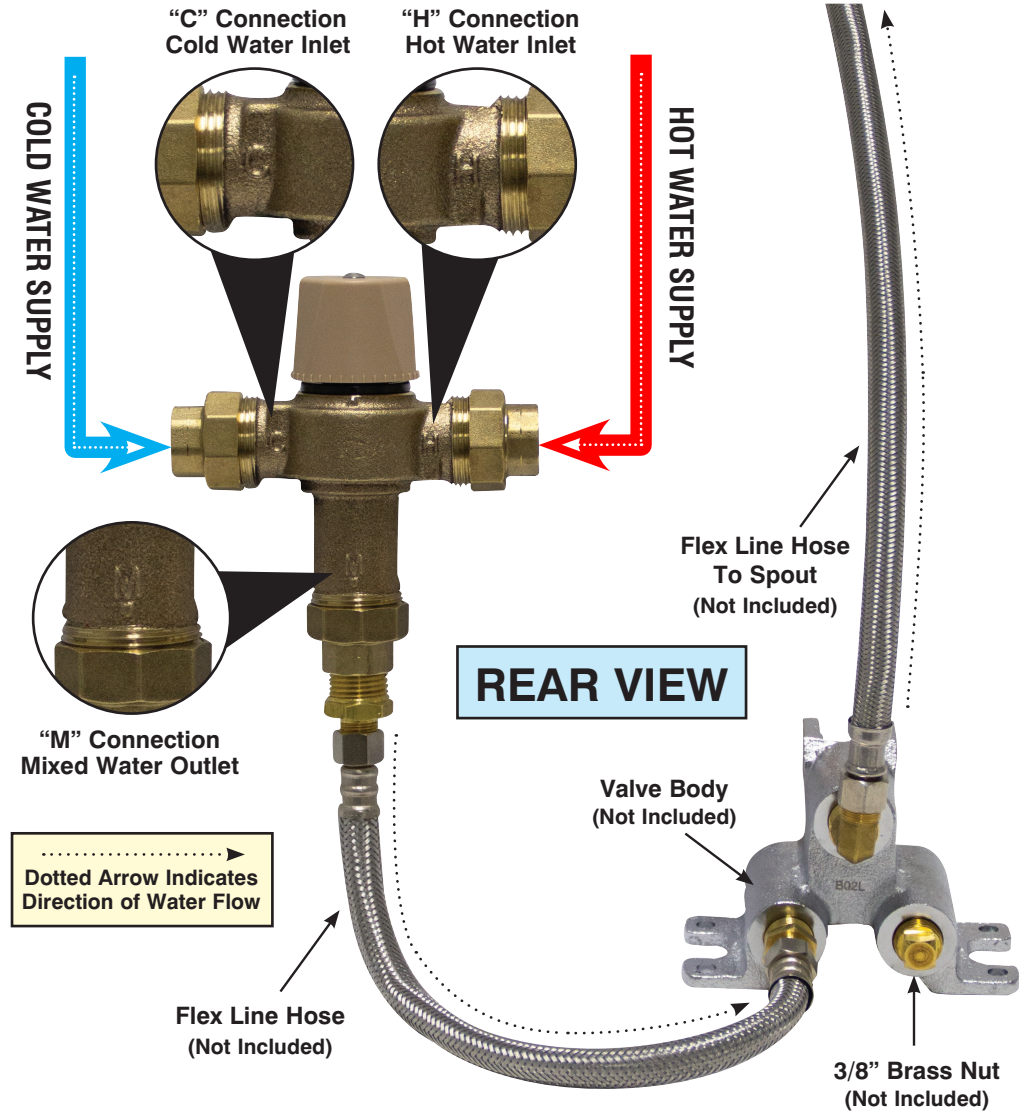



Example of Connection shown. Connections may vary based on Installer's application, codes and discretion.

# REGULATING A K-425 THERMOSTATIC MIXING VALVE



## Adjusting The Mixing Valve Temperature

1. Let water flow for at least 2 minutes to allow temperature to stabilize.
2. To adjust setting, loosen cap screw with hex wrench (Included). **See Figure 1.**  
Cap must be lifted 1/4" to adjust temperature.
3. Adjust temperature by turning knob counterclockwise to the increase temperature, turn knob clockwise to decrease temperature. **See Figure 2.**
4. Calibrate water temperature by placing a thermometer in the mixed water stream. Adjust as needed. Once desired temperature has been reached, lower handle and tighten screw.

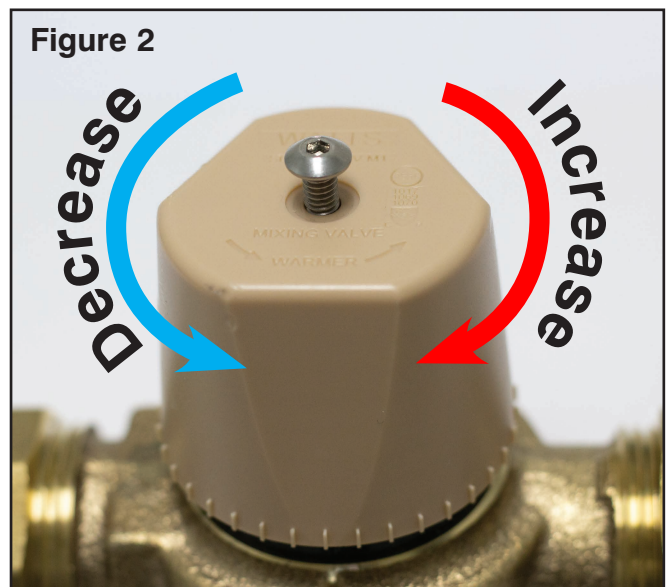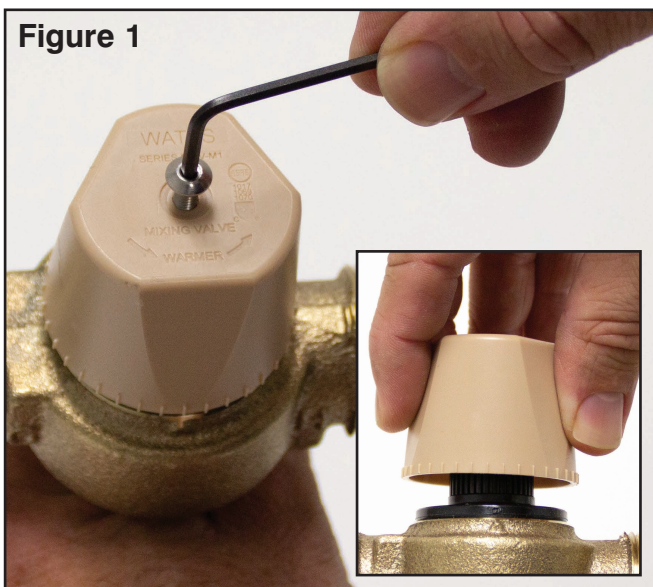

**For Further Assistance  
Contact Customer Service at:  
800-645-3166  
or  
customer@advancetabco.com**

