



Edgewood, New York 11717-8380

3/09



## Installation Instructions for GLASS RACK DOLLY HANDLES (RA-14)



**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Pan Rack Dollies manufactured by **ADVANCE TABCO®** are designed and constructed for the use of product storage and transport. **ADVANCE TABCO®** does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.


## CONTENTS INCLUDE:

Quantity	Parts Description
(1)	Handle
(2)	Side Support Straps
(4)	1/4" - 20 x 1-1/2" Bolt
(2)	1/4" - 20 x 1/2" Bolt
(6)	1/4" - 20 Washer Nuts

**TOOLS REQUIRED:** 7/16" Open end Wrench

### STEP 1:

Install Handle to GRD-1 Rack Dolly. Align hole at bottom of handle with hole in GRD-1 Dolly. Use 1/4"-20 x 1-1/2" Bolt & Washer Nut to secure. **(Figure 1)**.

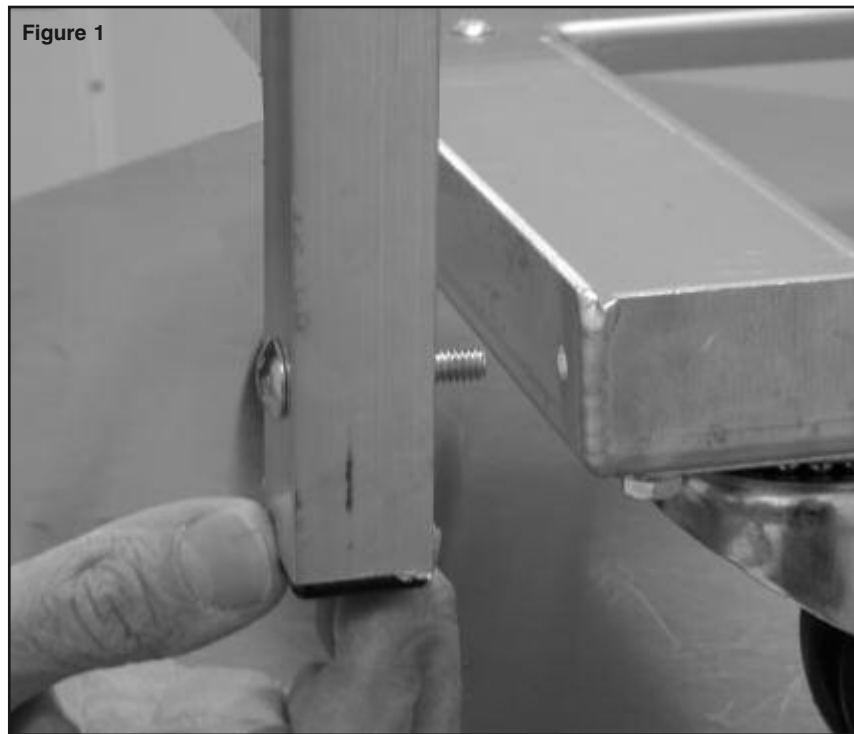

### STEP 2:

Install Side Support Straps by aligning edge of strap with edge of handle and bottom edge of GRD-1 **(Figure 2)**. Use 1/4"-20 x 1-1/2" Bolt to secure Support Strap to Handle and 1/4"-20 x 1/2" Bolt to secure Support Strap to side of GRD-1 **(Figure 3 & 4)**. Tighten all mounting hardware.

Figure 2



Figure 3

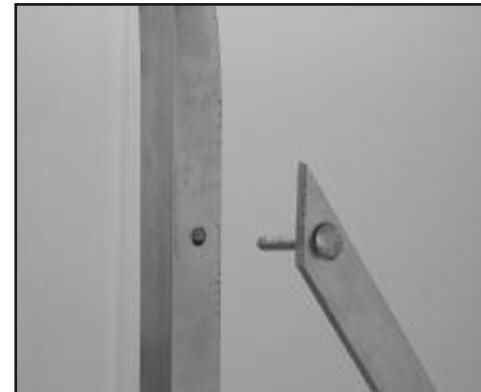


Figure 4

