



Installation Instructions

InstaBloom™ II Blade Assembly Replacement




WARNING

Sharp Blade Hazard

Blades are sharp and can cause cuts. To avoid injury from sharp blades, handle with caution.

1. Wash new blades with warm, soapy water and rinse thoroughly to remove the thin protective oil film.
2. Lay the InstaBloom™ II on its back.
3. Cover the blades with a rag or towel to minimize exposure to the blade edges.
4. Remove and save the screws that fasten the blade retainer and blade assembly to the pusher head.

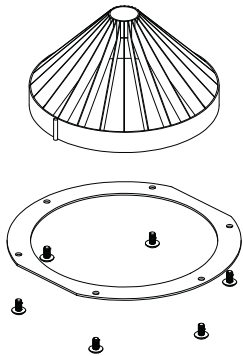

5. Carefully remove and discard blade assembly.
6. Insert the new blade assembly into the pusher head.
7. Reinstall the blade retainer ring and secure it using the saved screws.
8. Set the InstaBloom™ II onto its feet.

The Vollrath Company, L.L.C. Headquarters
1236 North 18th Street
Sheboygan, Wisconsin
53081-3201 USA
Main Tel: 800-624-2051 or 920-457-4851
Main Fax: 800-752-5620 or 920-459-6573
Canada Customer Service: 800-695-8560
Tech Services: techservicereps@vollrathco.com
www.vollrath.com

Vollrath Europe BV
Beneluxbaan 7
5121 AD RIJEN
The Netherlands
+31161870005

Vollrath of China
Vollrath Shanghai Trading Limited
23A, Time Square Plaza | 500
Zhang Yang Road
Pudong, Shanghai 200122
Tel: 86-21-50589580

Vollrath de Mexico S. de R.L. de C.V.
Periferico Sur No. 7980 Edificio 4-E
Col. Santa Maria Tequepexpan
45600 Tlaquepaque, Jalisco | Mexico
Tel: (52) 333-133-6767
Tel: (52) 333-133-6769
Fax: (52) 333-133-6768